

### Parts List

1	Driver / left side bar
1	Passenger / right side bar
3	Driver / left mounting bracket
3	Passenger / right mounting bracket
3	Driver / left support bracket
3	Passenger / right support bracket
12	Hex bolt, 8mm x 25mm
12	Flat washer, 8mm x 25mm
12	Lock washer, 8mm
12	Hex nut, 8mm
12	Hex bolt, 10mm x 30mm
12	Flat washer, 10mm x 25mm
12	Lock washer, 10mm
12	Hex bolt, 12mm x 30mm
24	Flat washer, 12mm x 30mm
12	Lock washer, 12mm
12	Hex nut, 12mm

### Level of Difficulty

Easy




Scan for helpful install tips

### Product Image



### Brackets and Hardware

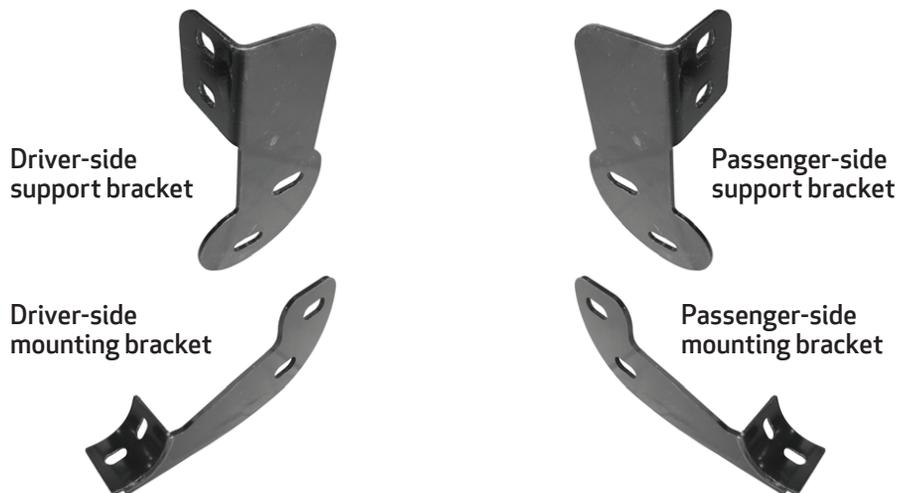

### Notes and Maintenance

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

To protect the product, wax after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel and aluminum, polish may be used to clear small scratches and scuffs on the finish. Mild soap may be used also to clean the product.

**PROCEDURE:**

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. On the passenger side of the vehicle, locate the six factory threaded studs located on the side panel underneath of the vehicle (**Figure 1**).
3. Partially attach all three passenger Side Panel Brackets to the factory threaded studs using the included (6) 8mm Flat Washers, (6) 8mm Lock Washers, and (6) 8mm Hex Nuts (**Figure 1**).
4. Once all three Side Panel Brackets are partially installed, loosely attach the Sidebar Brackets on the front side of the Side Panel Brackets using the included (6) 12mm x 30mm Hex Head Bolts, (6) 12mm Lock Washers, (6) 12mm Hex Nuts, and (6) 12mm Flat Washers. **NOTE:** The cradles on the Sidebar Brackets should be facing the front of the vehicle when installed (**Figure 1 & 2**).
5. Position passenger Sidebar onto Brackets and attach it using the included (6) 10mm x 30mm Hex Head Bolts, (6) 10mm Lock Washers, and (6) 10mm Flat Washers (**Figure 3**)
6. Level and adjust Sidebar; then tighten all hardware at this time.
7. Repeat steps 2-6 for driver Sidebar.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

**For gloss black finishes:** Mild soap may be used to clean the Sidebar.

**(Passenger Side Installation Shown)**

