



AUTOMOTIVE PRODUCTS, INC.

# INSTALLATION INSTRUCTIONS

APPLICATION: 2014+ CHEVROLET SILVERADO & GMC SIERRA 1500 DOUBLE & CREW CAB  
APP PART # 25-3720, 25-3725, 25-3710, 25-3715, 26-3710, 26-3720

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	DRIVER SIDE STEP BAR	13MM SOCKET
2	1	PASSENGER SIDE STEP BAR	7/32" HEX KEY
3	6	MOUNTING BRACKETS	TORQUE WRENCH
4	12	M8 HEX CAP SCREWS	RATCHET
5	12	M8 FLAT WASHERS	
6	12	M8 LOCK WASHERS	
7	12	M8 NUT CLIPS	
8	12	3/8" BUTTON HEAD BOLTS, BLACK-STAINLESS STEEL	
9	12	3/8" TOOTHED LOCK WASHERS, BLACK-STAINLESS STEEL	
10	12	3/8" FLAT WASHERS	

**ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING**

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. **FOR CREW CAB MODELS:** Starting from the drivers side of the vehicle, locate the threaded hole located in the rocker panel towards the front of the vehicle. Take (1 PCS) mounting bracket and attach it to the threaded hole using (1 PCS) M8 hex cap screw, (1 PCS) M8 lock washer, and (1 PCS) M8 flat washer. Locate the existing welded nut on the pinch weld and attach the mounting bracket to the bottom of the pinch weld using (1 PCS) M8 hex cap screw, (1 PCS) M8 lock washer, and (1 PCS) M8 flat washer, do not fully tighten at this time. *FIGURE 1 & 2*
3. Move to the next threaded hole in the rocker panel and repeat step 2.
4. At the rear most mounting location, remove the rubber plug from the bigger hole to access the smaller OD hole, and insert (1) M8 nut clip over the hole, attach (1 PCS) mounting bracket to the previously installed nut clip using (1 PCS) M8 hex cap screw, (1 PCS) M8 lock washer, and (1 PCS) M8 flat washer. Locate the existing hole in the pinch weld and place (1 PCS) M8 clip nut onto the hole, attach the mounting bracket to the pinch weld using (1 PCS) M8 cap screw, (1 PCS) lock washer, and (1 PCS) M8 flat washer, do not fully tighten at this time. *FIGURE 3 & 4*
5. Repeat steps 2-4 for the passenger side.
6. Take the drivers side step bar and place it on the mounting cradles attach the step bar using (6 PCS) 3/8" button head screws, and (6 PCS) 3/8" toothed lock washers and (6PCS) 3/8" flat washers. Repeat this step for the passenger side. *FIGURE 5*
7. Align and adjust as needed then tighten all hardware at this time. Torque all M8 hardware to 25-30 ft lbs, and 3/8" fasteners to 30-35 ft lbs.

## CARE INSTRUCTIONS




- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER




Westin Automotive Products, Inc.  
320 Covina Blvd  
San Dimas, Ca. 91773

Thank You for choosing Westin products  
For Additional installation assistance please call  
Customer service (800) 793-7846  
[www.westinautomotive.com](http://www.westinautomotive.com)

1. **FOR DOUBLE CAB:** Starting at the drivers side of the vehicle locate the existing circular hole in the rocker panel towards the front of the vehicle. Remove the rubber plug from the bigger hole to access the smaller OD hole and insert (1 PCS) M8 nut clip over the hole, attach (1 PCS) mounting bracket to the previously installed nut clip using (1 PCS) M8 hex cap screw, (1 PCS) M8 lock washer, and (1 PCS) M8 flat washer. Locate the existing hole in the pinch weld and place (1 PCS) M8 clip nut onto the hole, attach the mounting bracket to the pinch weld using (1 PCS) M8 hex cap screw, (1 PCS) M8 lock washer, and (1 PCS) M8 flat washer, do not fully tighten at this time. *FIGURE 1 & 2*
2. Repeat step 1 for all of the mounting locations on the drivers side, and passenger side.
3. Take the drivers side step bar and place it on the mounting cradles attach the step bar using (6 PCS) 3/8" button head screws, (6 PCS) 3/8" toothed lock washers and (6PCS) 3/8" flat washers. Repeat this step for the passenger side. *FIGURE 5*
4. Align and adjust as needed then tighten all hardware at this time. Torque all M8 hardware to 25-30 ft lbs, and 3/8" fasteners to 30-35 ft lbs.

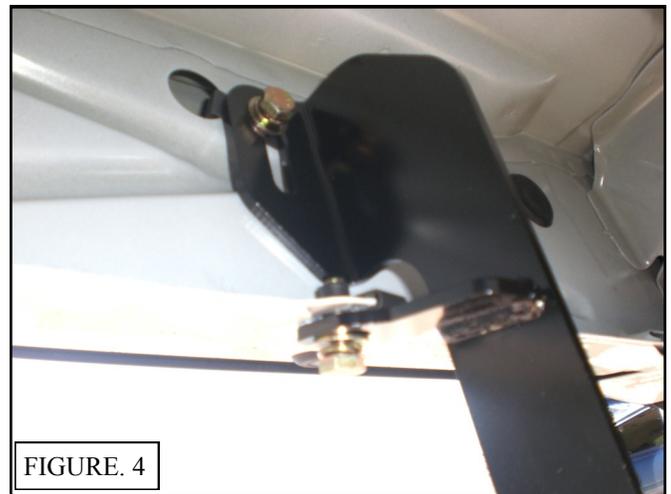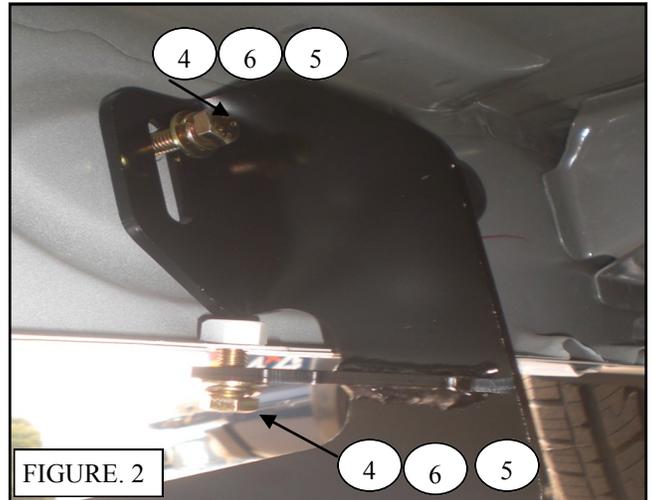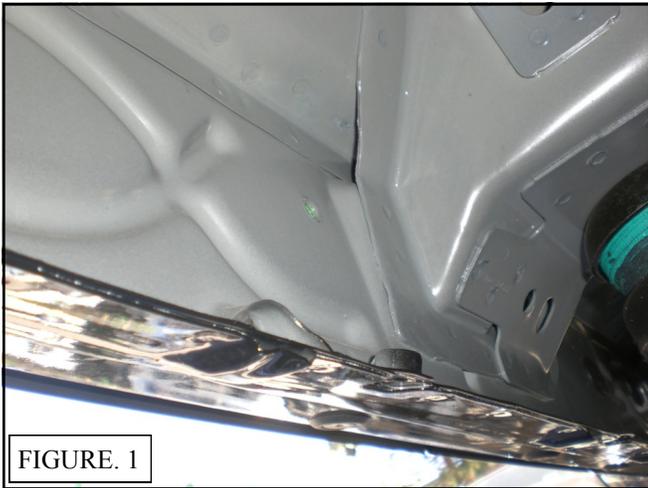

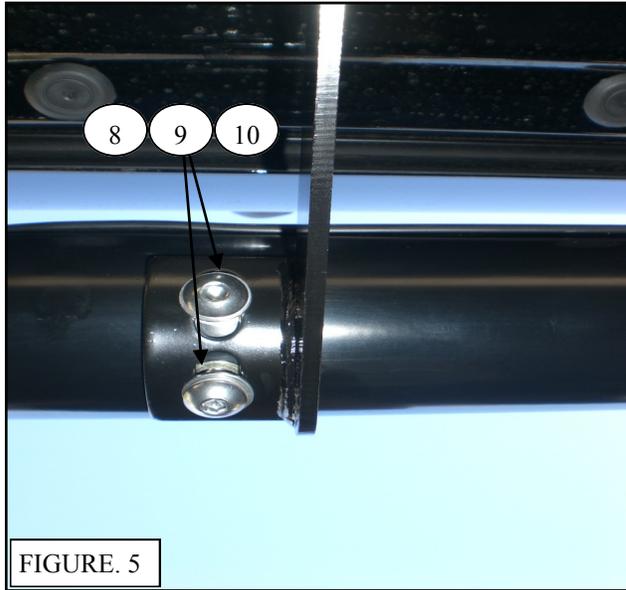

Westin Automotive Products, Inc.  
320 Covina Blvd  
San Dimas, Ca. 91773

Thank You for choosing Westin products  
For Additional installation assistance please call  
Customer service (800) 793-7846  
[www.westinautomotive.com](http://www.westinautomotive.com)