


LUND®

DUALY MUD FLAP INSTALLATION INSTRUCTIONS

1. Position mud flap at desired height. Now use bracket as a guide to drill three 11/32" holes in the three locations as shown illustration. Make sure center hole goes through the center of the inner wheel well lip.
2. Bolt through the mud flap, bracket and wheel well lip and liner. You may need to pull the wheel well liner out some vehicles to be able to install the outside bolt.
3. Now you will need to bend the strap so one end will bolt to the end of the bracket and the other end to the truck box pinch weld as shown. Note: install the two bolts that fasten the strap to the bracket from the inside out to give clearance for the leaf springs.

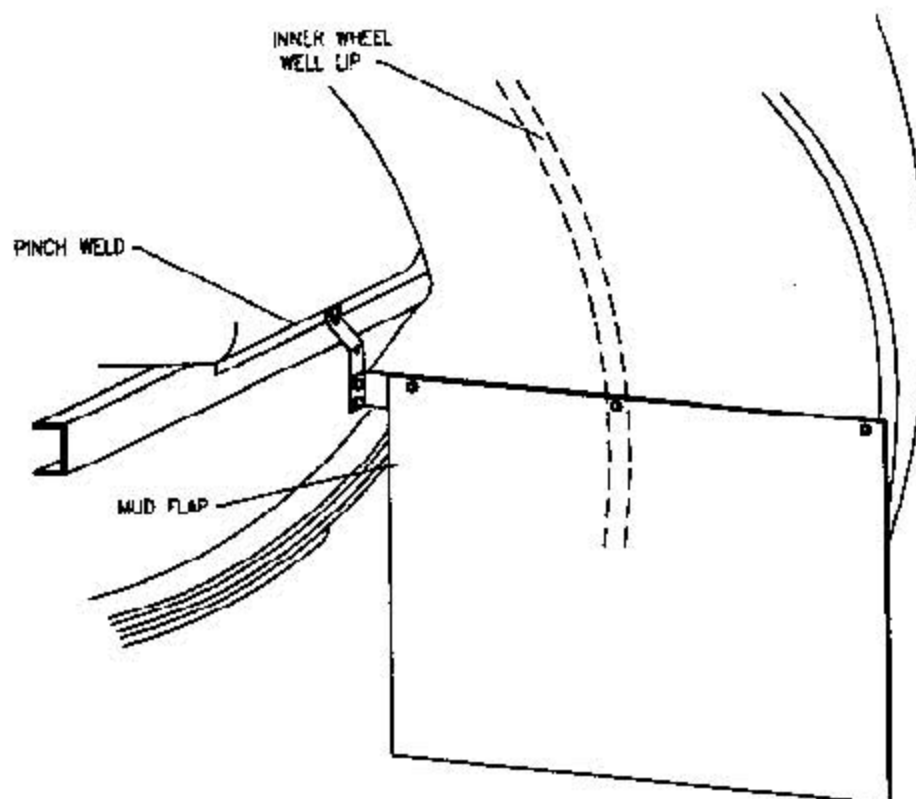

LUND®

Lund International

800-241-7219 • Visit us at lundinternational.com

© 2012 Lund International, Inc. All rights reserved.

Lund® and the Lund® logo are trademarks of Lund International, Inc.

