




**Installation Instructions Dodge Mud Flap
2002 Dodge Ram single wheel.**

**930DG-02
EX-930DG-02**

1. Attach "L" bracket to mud flap using 5/16" bolt, washers, and nut. Position the mud flap at the desired height and clamp the mud flap to the wheel well. Drill a hole in the pinch weld above the "L" bracket. Bolt strap to the pinch weld and fasten with 5/16" bolt, washers, and nut. Bend the strap for spring clearance and to reach the "L" bracket. If holes do not line up adjust the mud flap or drill additional holes in the straps.
2. To attach the mud flap to the wheel well lip, drill two 1/8" holes through the mud flap and into the wheel well lip. If you drill through the metal strip of the mud flap, you may need to drill a 1/4" hole in the metal layer only for screw clearance. Brite side of mud flap should face the rear of the vehicle.

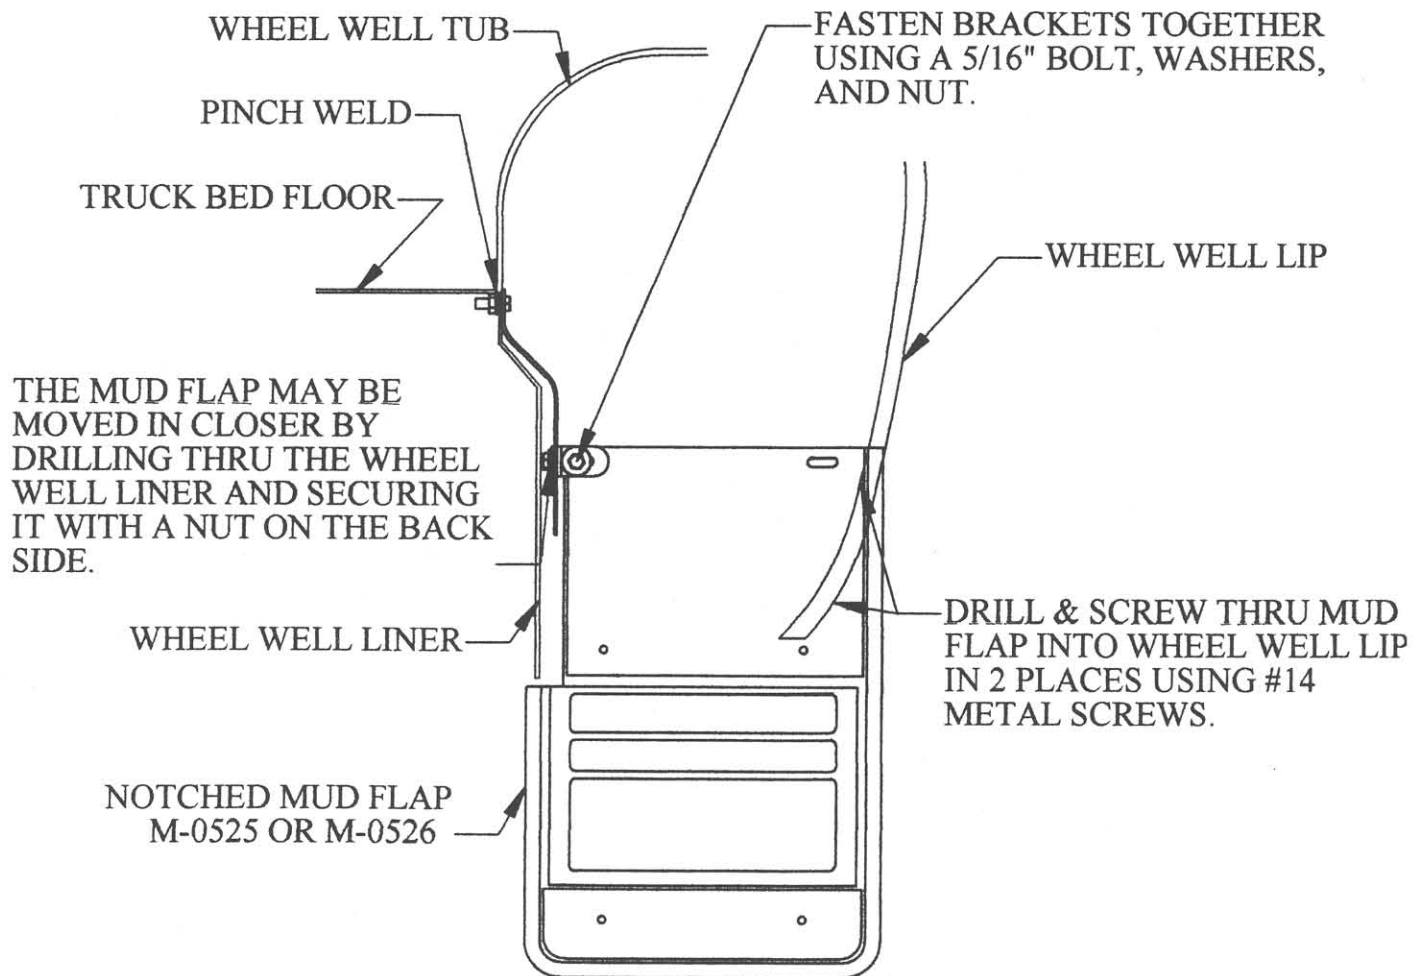

Lund International

800-241-7219 • Visit us at lundinternational.com

© 2012 Lund International, Inc. All rights reserved.

Lund® and the Lund® logo are trademarks of Lund International, Inc.

