



# INSTALLATION INSTRUCTIONS

## Snyper Transfer Case Skid Plate

AUTOMOTIVE PRODUCTS,

**APPLICATION:**

Jeep Wrangler Unlimited 2007-2016


Jeep Wrangler Unlimited 2007-2016

**PART NUMBER:**

42-21025

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	Transfer Case Skid Plate	18MM Socket
2	1	Mounting Bar	Ratchet
3	4	Plastic Retainer Square, M8	Torque Wrench
4	4	M8 Split Lock Washer	13MM Socket
5	4	M8 Flat Washer	
6	4	M8 Hex Nut	
7	4	M8 Carriage Bolt	

**ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING**

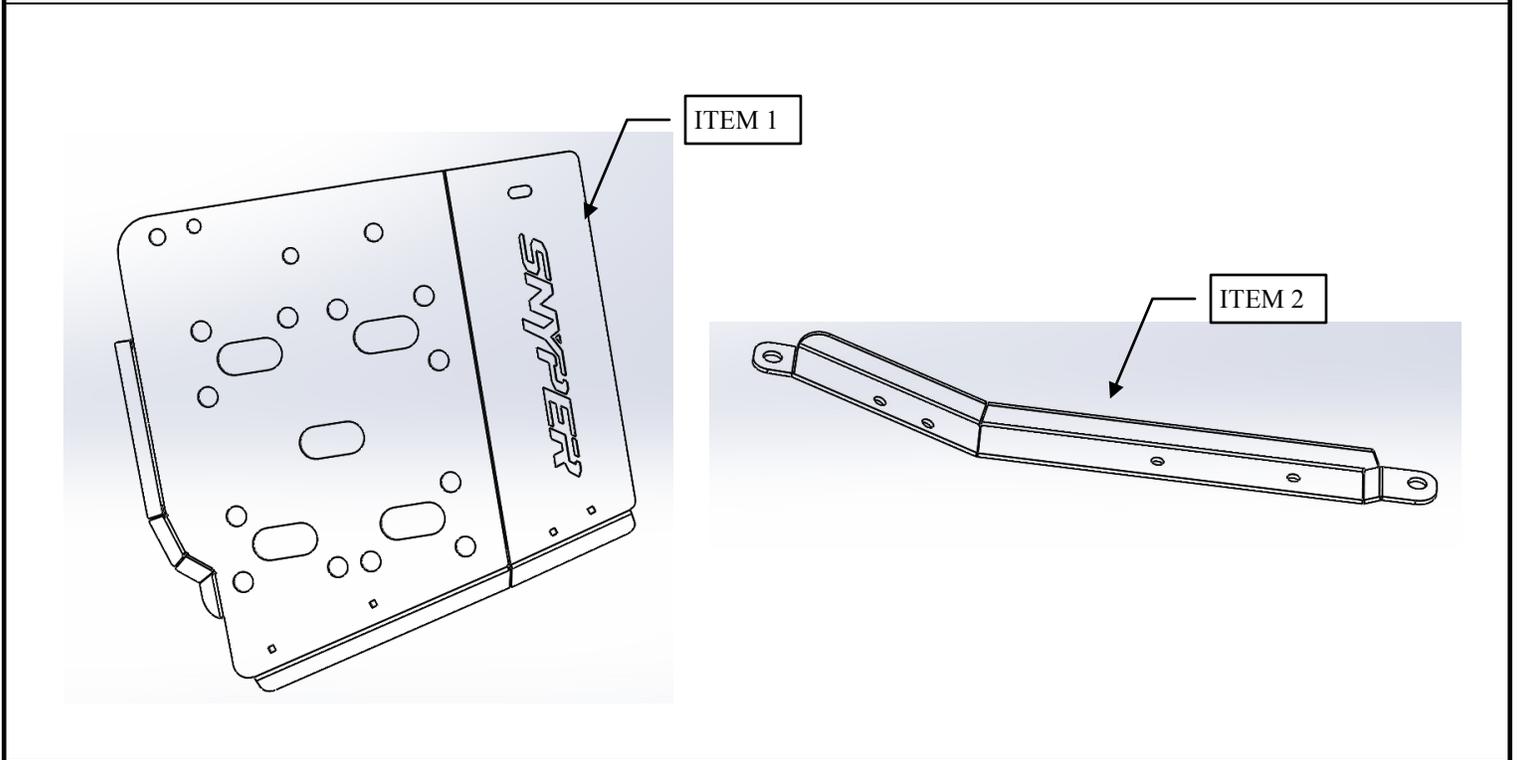


Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773

Thank you for choosing Westin products  
for additional installation assistance please call  
Customer Service (800) 793-7846


## PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation. (This skid plate can be installed by one person but it is highly recommended to have assistance of a second person.) **Failure to identify damage before installation could lead to a rejection of any claim.**

2. Remove stock transfer skid plate **Fig. A** and save the hardware removed. It will be used to install your Snyder Transfer Case Skid Plate.

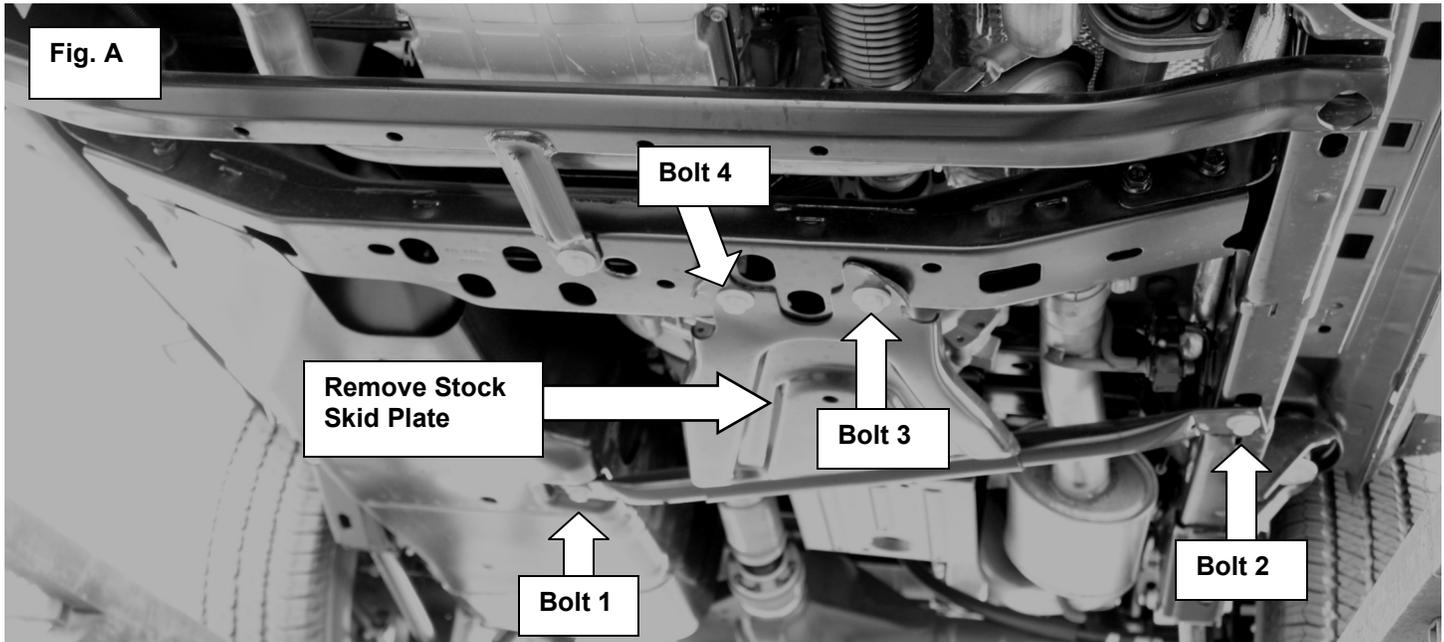


3. Install Mounting Bar from bolt 1 to bolt 2 as depicted in **Fig.A**. Position Mounting Bar with flange towards front of vehicle. See **Fig.B**.

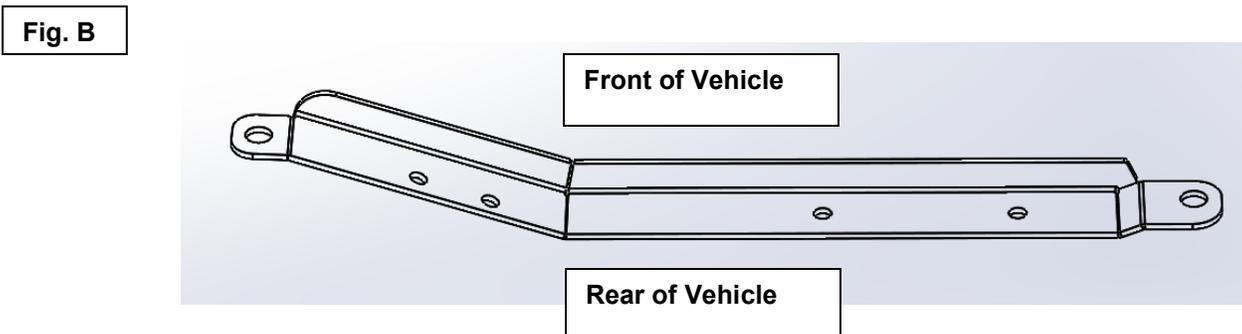

3. Align Skid plate to mounting bar and install M8 hardware hardware. See Fig.C.


Fig.C

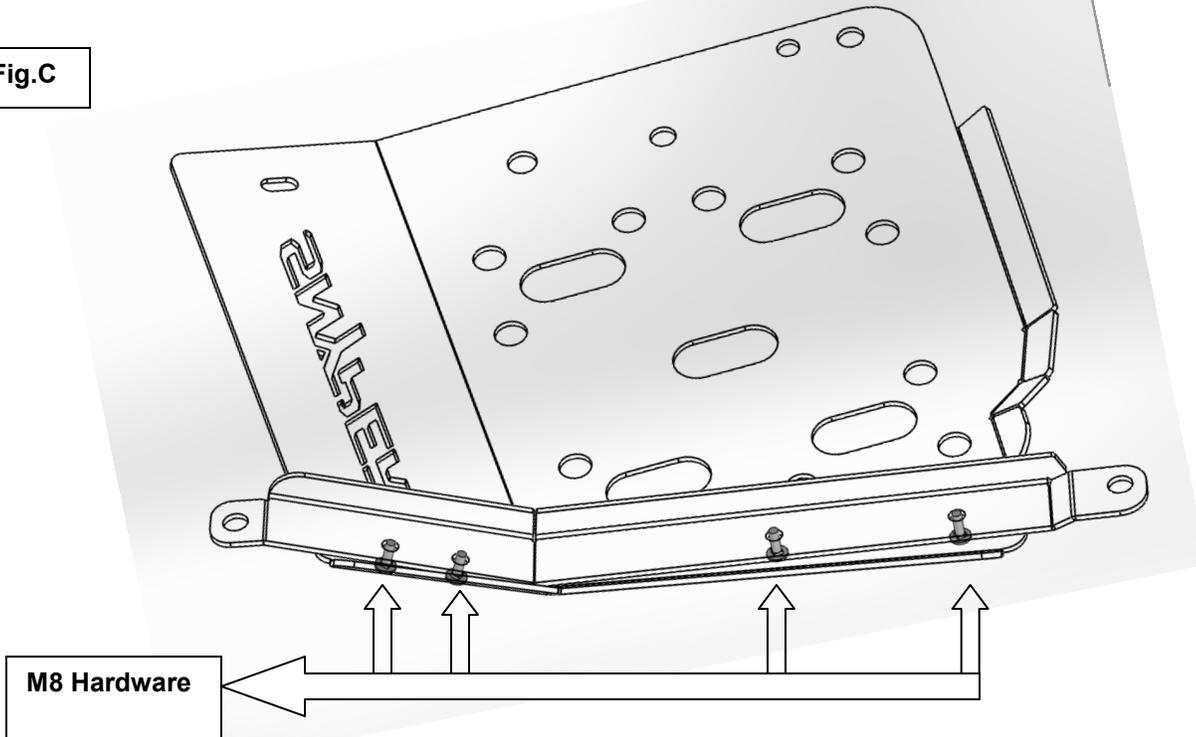

4. Install stock bolts that mount skid plate to crossmember and tighten to 50-55 Ft-Lbs. See Fig. D.

5. Tighten M8 hardware to 15-17 Ft-Lbs.

Fig.D

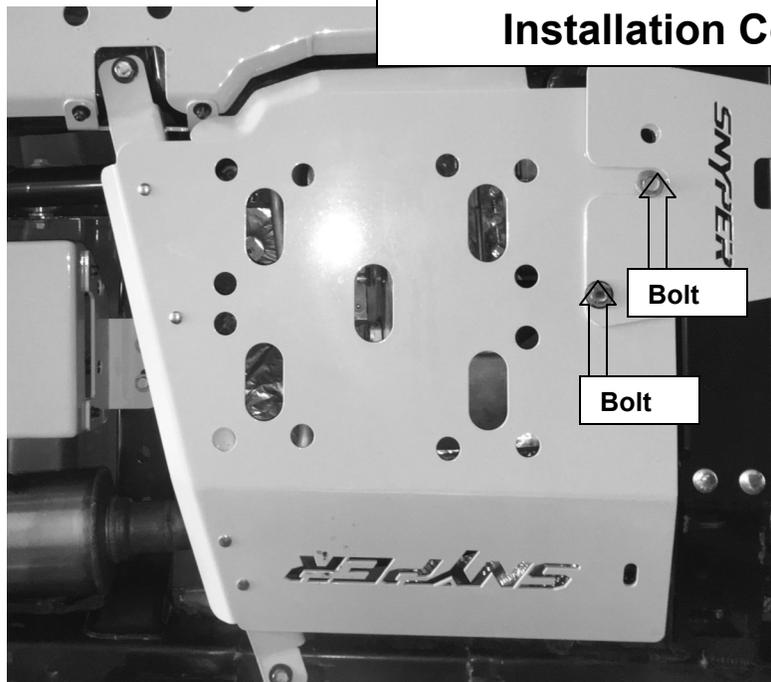

#### CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773

Thank you for choosing Westin products  
for additional installation assistance please call  
Customer Service (800) 793-7846