

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FULL SIZE CHEVROLET/GMC REGULAR CAB TRUCK

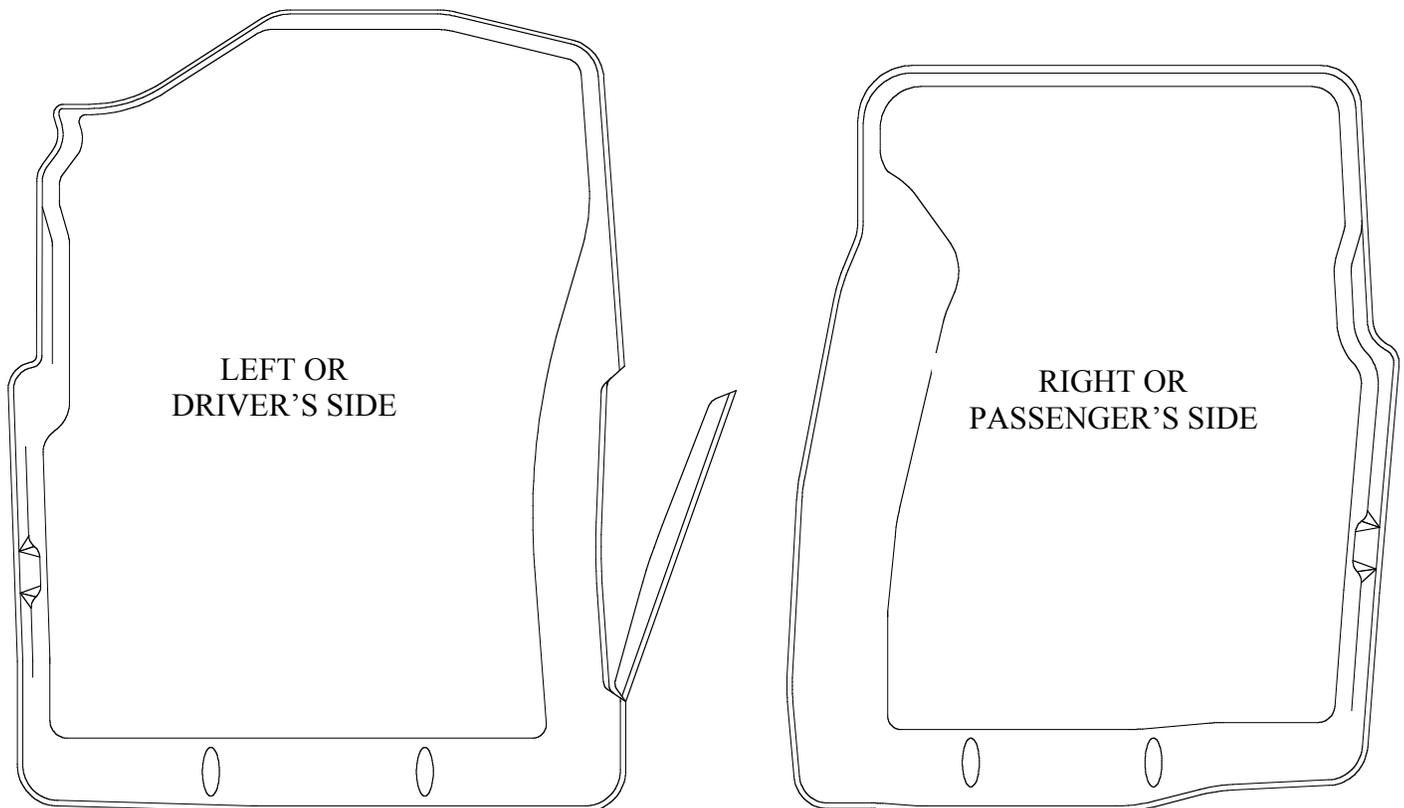

IF YOUR VEHICLE IS EQUIPPED WITH A MANUAL TRANSFER CASE SHIFTER, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE. TRIM USING THE MOLDED IN TRIM GROOVE AS A TRIMMING GUIDE. A UTILITY KNIFE OR HEAVY SCISSORS WORKS WELL FOR TRIMMING YOUR LINER.

PHOTO SHOWING PART #3135 TRIMMED FOR A  
MANUAL TRANSFER CASE SHIFTER.

