



Innovative Truck Racks!

Two Companies ! One Vision !



Built to demand respect !

DOMINATOR III SideSteps WHEEL - TO - WHEEL

INSTALLATION INSTRUCTIONS

PART NO. D36081 CHEVY/GMC CREW CAB P/U 2/4WD LONG BED REV.A 2/08


PARTS LIST

QTY	PARTS DESCRIPTION
4	5/16" U-NUTS
4	5/16" X 1" HEX BOLTS
2	8M X 25M HEX BOLTS
6	5/16" LOCK WASHERS
6	5/16" FLAT WASHERS
18	3/8" x 1 1/4" HEX BOLTS
18	3/8" LOCK WASHERS
18	3/8" HEX NUTS



QTY	PARTS DESCRIPTION
18	3/8" FLAT WASHERS
3	C07D DRIVER MOUNTING BRACKETS
3	C07P PASSENGER MOUNTING BRACKETS
3	C07D DRIVER MOUNTING BRACKETS
1	381FP FRONT PASSENGER SIDESTEP SECTION
1	381RP REAR PASSENGER SIDESTEP SECTION
1	381FD FRONT DRIVER SIDESTEP SECTION
1	381RD REAR DRIVER SIDESTEP SECTION

STEP 1. Read the instructions completely before you begin the installation.


If the vehicle is equipped with factory side steps, remove the fasteners and side steps.

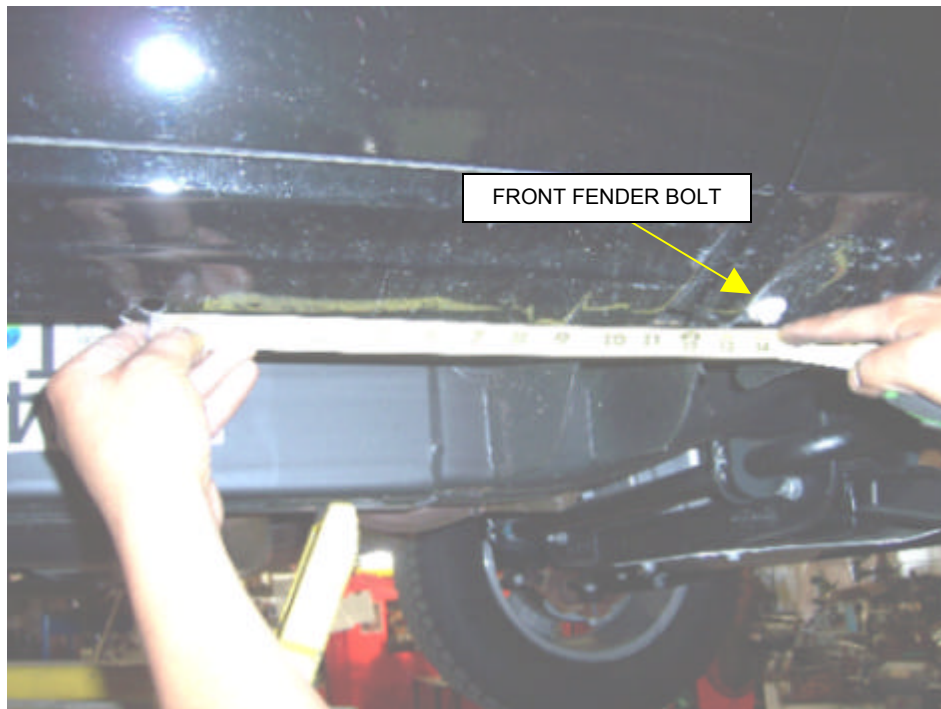



STEP 2. This installation uses three mounting brackets per side. Begin by installing the passenger side front mounting bracket. Measure rearward from the front fender bolt approximately 14" and locate the single hole in the body pinch mold and the square nut spot welded in the rocker panel.

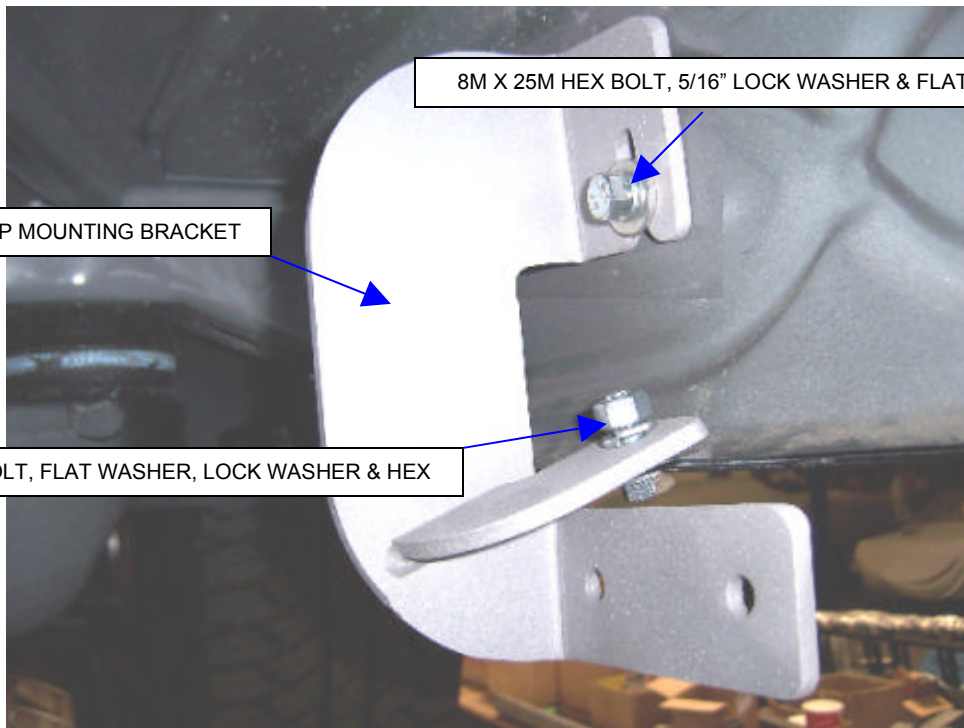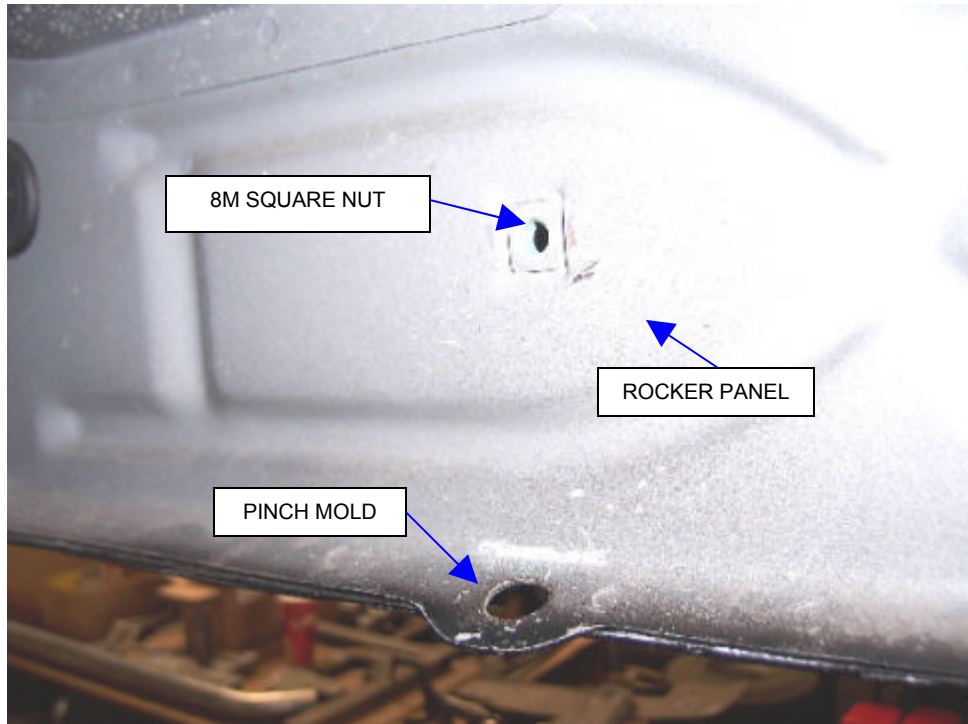



STEP 3. Loosely attach one of the C07P mounting brackets to the rocker panel and pinch mold using the 8M, 5/16" and 3/8" fasteners as shown.

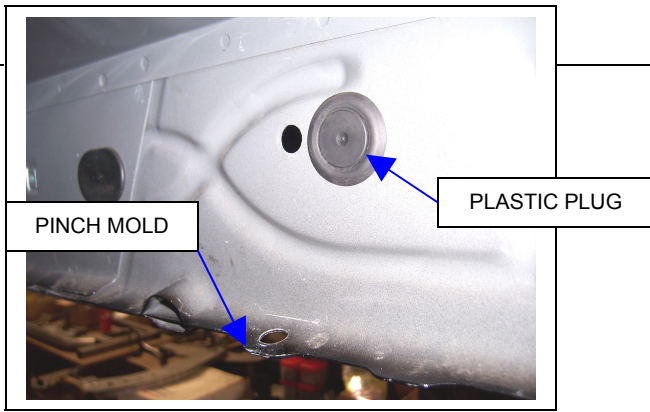

STEP 4. Locate the holes in the body pinch mold and rocker panel for the center and rear mounting brackets. Measure rearward from the front fender bolt approximately 58 7/8" for the center and 75 1/8" for the rear bracket. Remove the plastic plugs from the rocker panel and install 5/16" U-NUTS in the rocker panel as shown.

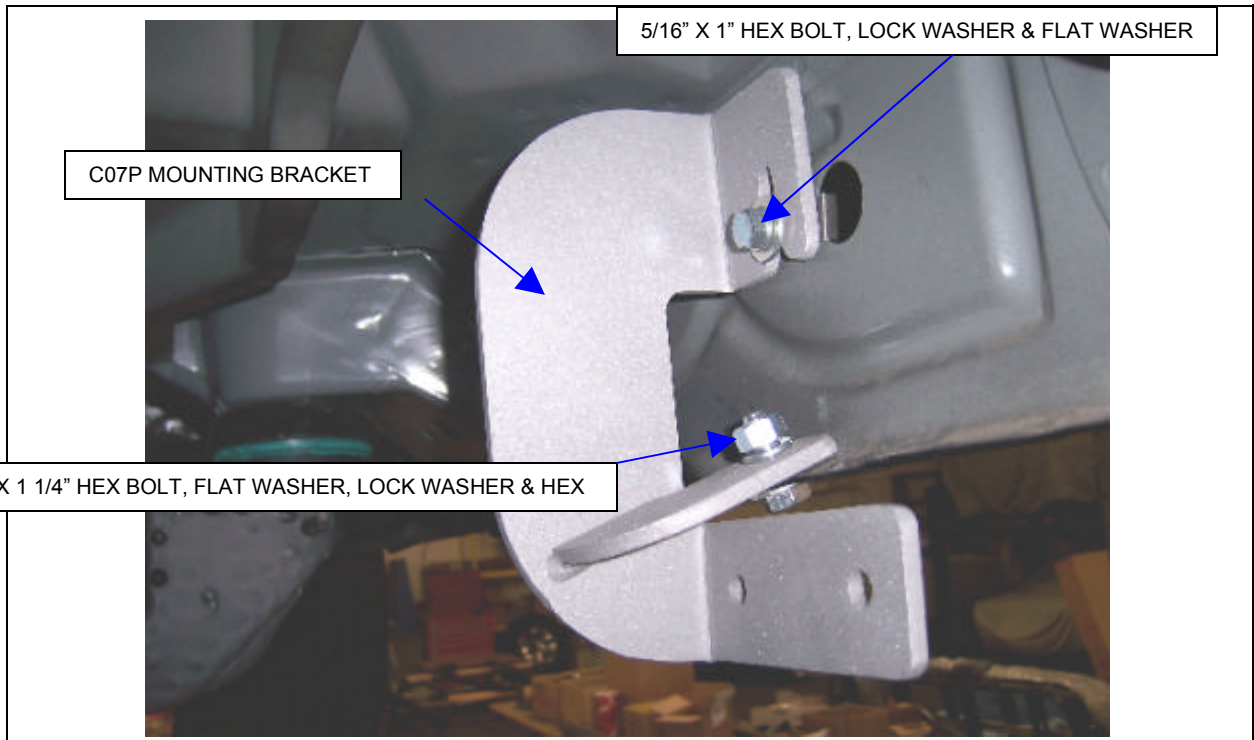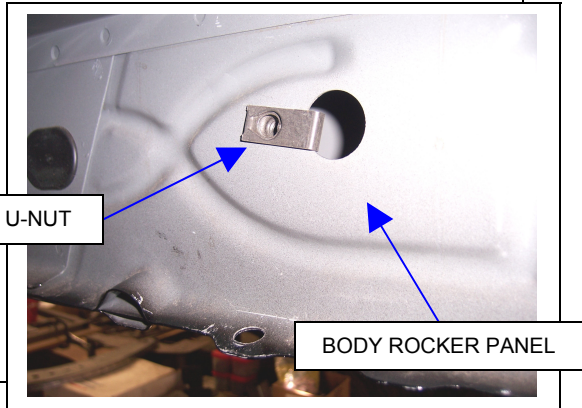

STEP 5. Loosely attach the two remaining C07P mounting brackets to the rocker panel and pinch mold using the 5/16" and 3/8" fasteners as shown.

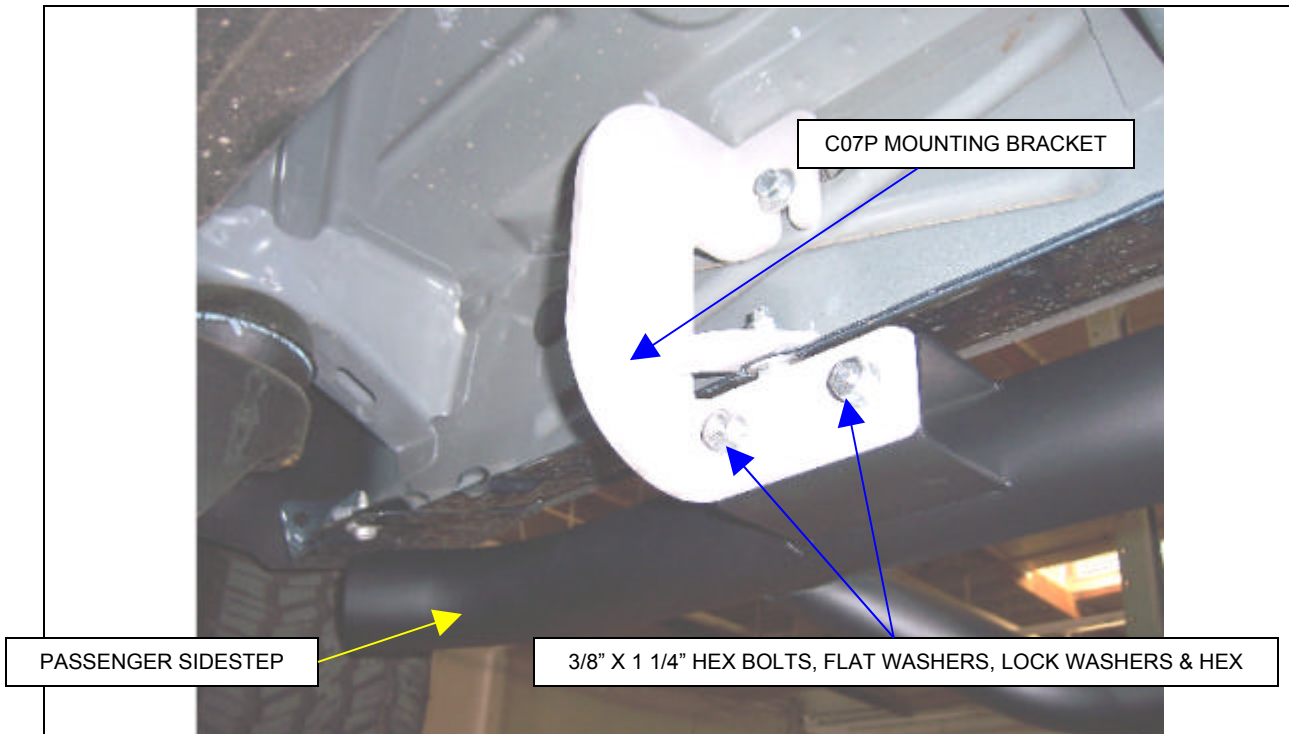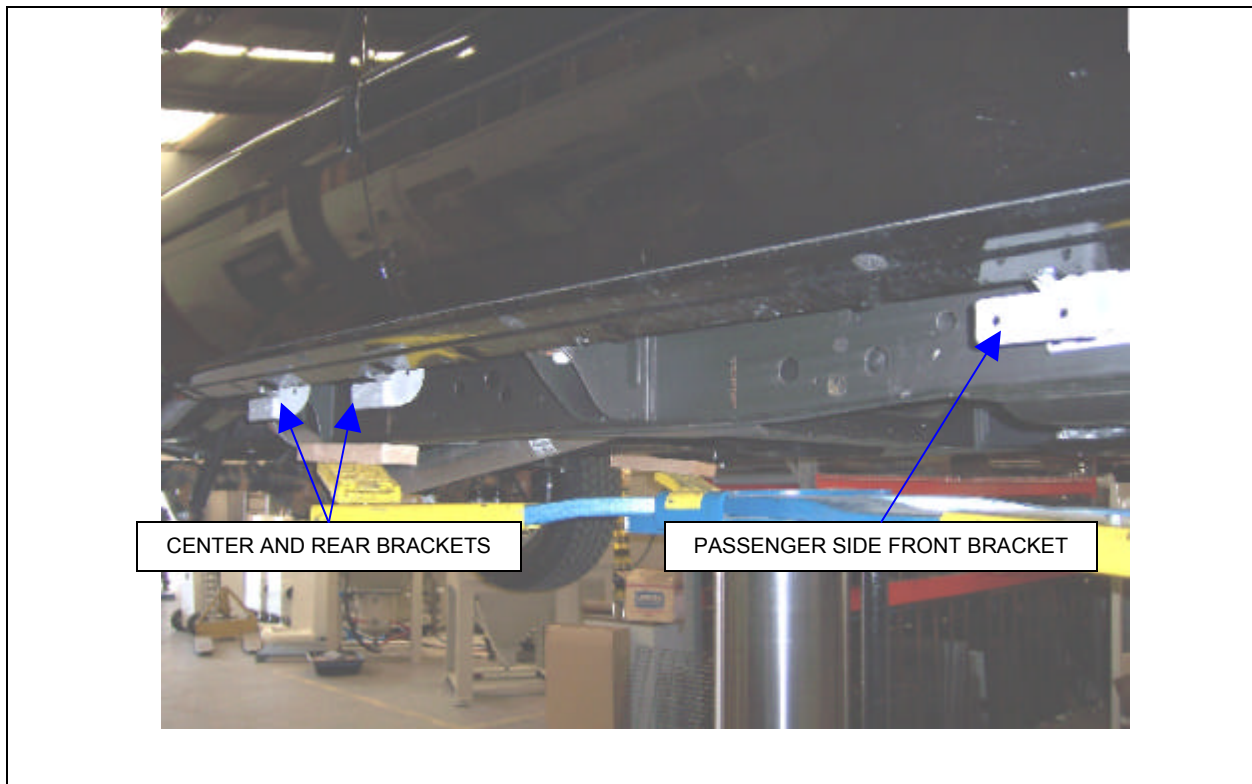

STEP 6. Position the passenger sidestep up to the vehicle and loosely attach it to the mounting brackets using the 3/8" x 1 1/4" hex bolts, flat washers, lock washers and hex nuts.

STEP 7. Tighten all mounting bracket and sidestep nuts and bolts.

STEP 8. Repeat the above steps to install the driver side mounting brackets and sidestep.

VISIT OUR WEBSITE FOR OUR COMPLETE PRODUCT LINE!
WWW.GORHINO.COM . PH: (888) 427- 4466 . BREA, CALIFORNIA