



DOMINATOR III SideSteps WHEEL-TO-WHEEL

INSTALLATION INSTRUCTIONS

PART NO. D36248 04-09 FORD F-150 SUPER CAB P/U 2/4WD 6.5' BED

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PACKING LIST

QTY PART DESCRIPTION

- 12 3/8" X 1" CARRIAGE BOLTS
- 12 3/8" X 1 1/4" HEX BOLTS
- 36 3/8" FLAT WASHERS
- 24 3/8" LOCK WASHERS
- 24 3/8" HEX NUTS



QTY PART DESCRIPTION

- 4 FO4 MOUNTING BRACKETS
- 1 348FP PASSENGER FRONT SECTION
- 1 348RP PASSENGER REAR SECTION
- 1 348FD DRIVER FRONT SECTION
- 1 348RD DRIVER REAR SECTION
- 2 F07 MOUNTING BRACKETS

INSTALLATION INSTRUCTIONS

READ THE INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION



STEP 1. THIS INSTALLATION USES (3) MOUNTING BRACKETS PER SIDE. BEGIN BY INSTALLING THE SIDE STEP MOUNTING BRACKETS ON THE PASSENGER SIDE OF THE VEHICLE. LOCATE THE HOLES IN THE BODY PINCH MOLD AT THE FRONT, CENTER AND REAR OF THE CAB. **PHOTO #1**

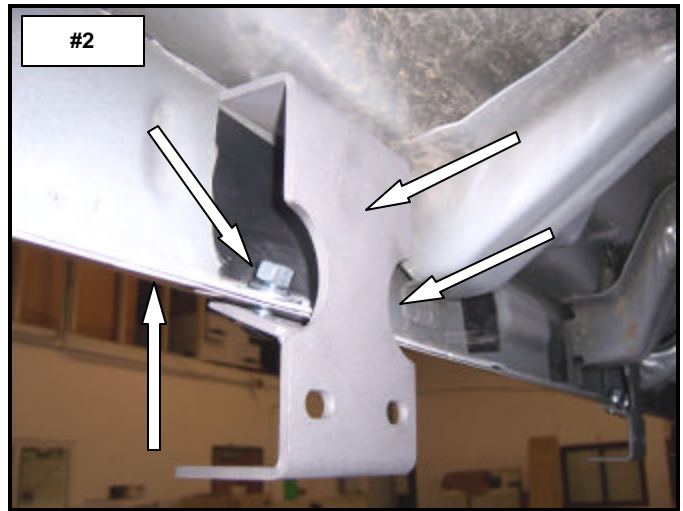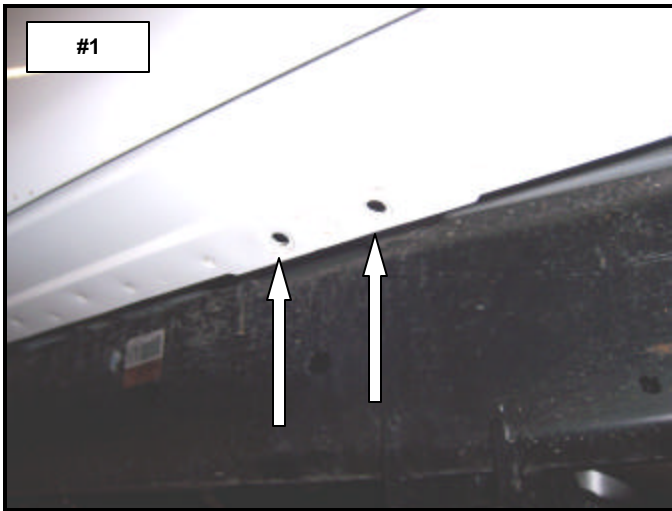

STEP 2. ATTACH EACH OF THE MOUNTING BRACKETS TO THE PINCH MOLD USING (2) 3/8" X 1" CARRIAGE BOLTS, (2) FLAT WASHERS, (2) LOCK WASHER AND (2) HEX NUTS. HAND TIGHTEN. **PHOTO'S #2 & #3**

1/30/2009

STEP 3. ATTACH THE PASSENGER SIDE STEP TO EACH OF THE MOUNTING BRACKETS USING (2) 3/8" X 1 1/4" HEX BOLTS, (4) FLAT WASHERS, (2) LOCK WASHERS AND (2) HEX NUTS. **PHOTO #4**

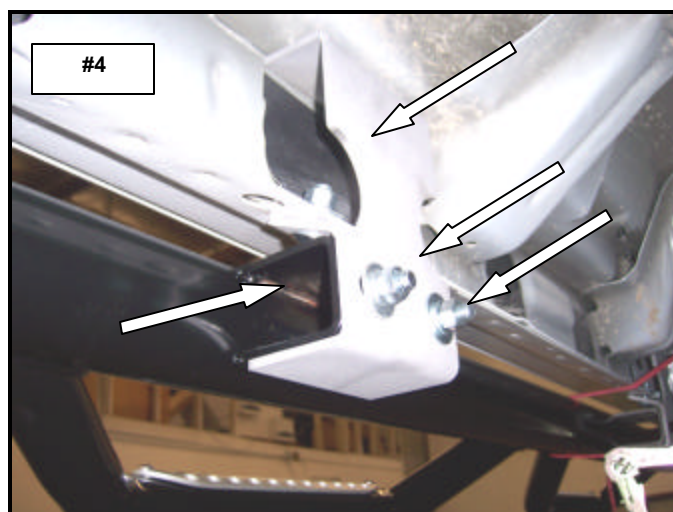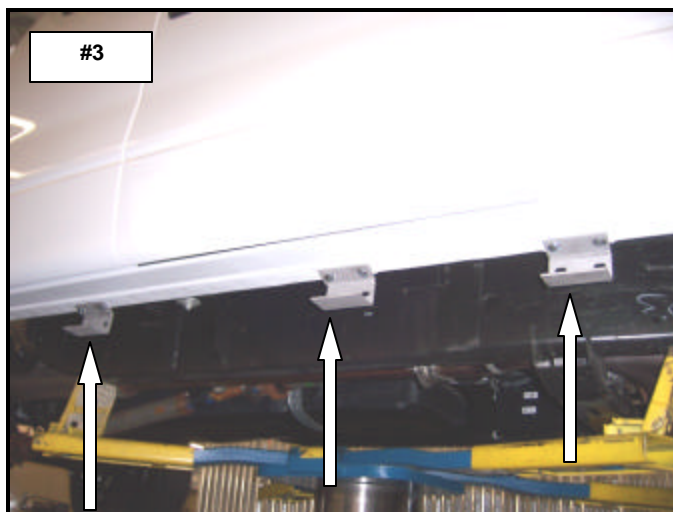

STEP 4. ALIGN THE SIDE STEP WITH THE VEHICLE AND TIGHTEN ALL MOUNTING BRACKET AND SIDE STEP NUTS AND BOLTS. REPEAT THE ABOVE PROCESS TO INSTALL THE DRIVER SIDE BRACKETS AND SIDE STEP.




**FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**

DOMINATOR III SideSteps WHEEL - TO - WHEEL

ASSEMBLY INSTRUCTIONS

QTY	PARTS DESCRIPTION
2	PLASTIC PLUGS
2	3/8" X 3/4" SOCKET SET SCREWS
2	PLASTIC TRIM RINGS


STEP 1. BEGIN BY LAYING OUT THE DRIVER SIDE FRONT AND REAR SIDESTEP SECTIONS ON A PROTECTIVE SURFACE WITH THE STEP PAD SIDE DOWN.

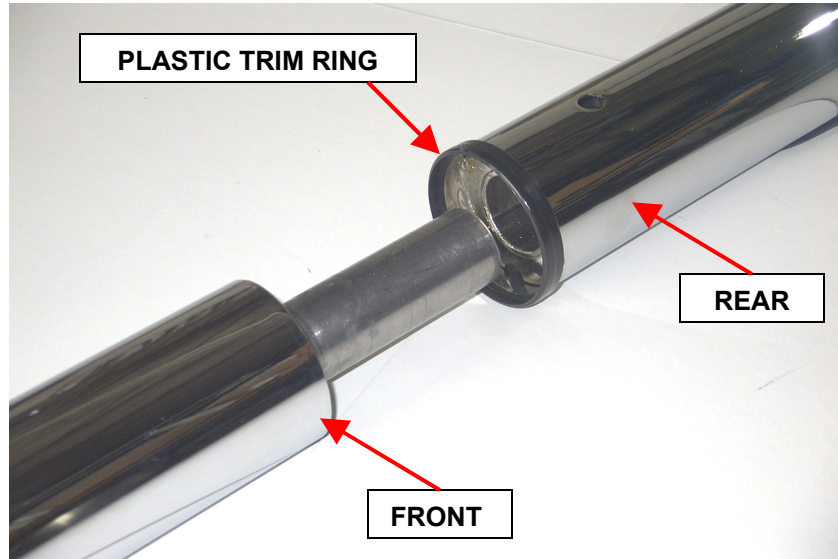

STEP 2. INSTALL THE PLASTIC TRIM RING ON THE REAR SECTION AND INSERT THE FRONT SECTION INTO THE REAR SECTION.

STEP 3. POSITION THE SIDESTEP SECTIONS AGAINST THE PLASTIC TRIM RING.

STEP 4. ALIGN THE FRONT AND REAR STEP HOOPS AND SECURE THE ASSEMBLY USING (1) SOCKET SET SCREW.

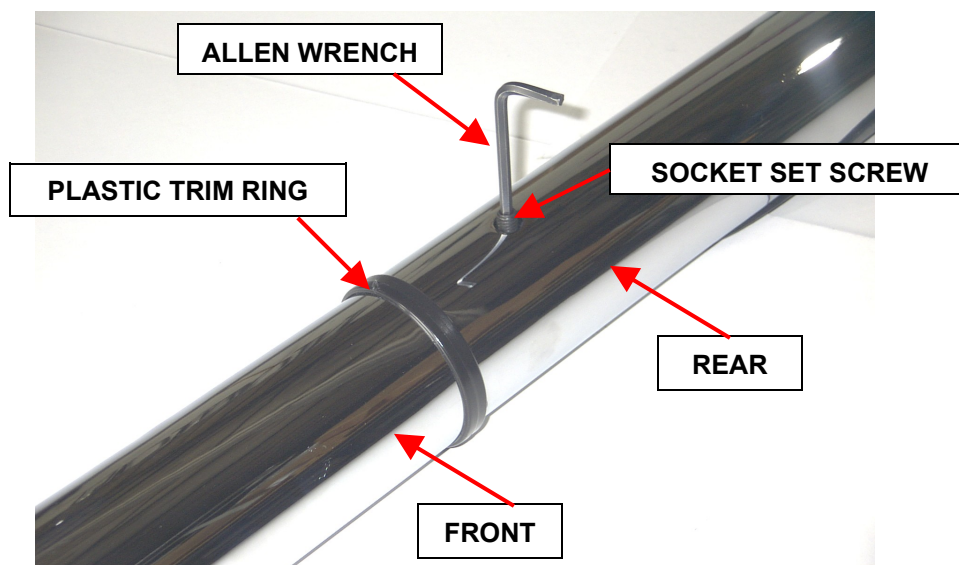

STEP 5. INSTALL THE PLASTIC PLUG TO CONSEAL THE SET SCREW.

REPEAT THE ABOVE STEPS TO ASSEMBLE THE PASSENGER SIDE.

FODI7.003.I