



PART NUMBER: H0581CC

PRODUCT: NERF-STEP

APPLICATION: 04-15 HONDA RIDGE LINE

Parts included:	Qty
Driver Side Nerf-step	1
Passenger side Nerf-Step	1
Support Brackets	6
<b>Hardware Pack:</b>	<b>1</b>
M8x25mm HC Bolts	12
3/8" Flat Washers	12
5/16"x1" Hex head bolts	18
5/16" Nuts	18
5/16" Washer	36




## INSTALLATION:


**Step 1:** Locate the Driver side Step. (Fig. A)



**Step 2:** There will be three OE mounting locations on the underside of the body. Two towards the front of the cab, and one located towards the rear of the cab. Carefully align the brackets to the OE mounting holes. (Fig. B)

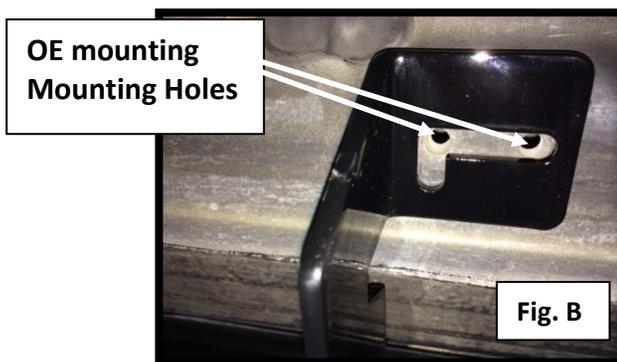


**Step 3:** Starting with the center bracket, insert the two M8x25mm Hex head bolts, nuts, and washers. Leave bolts loose; do not tighten all the way. **(Fig.C)**

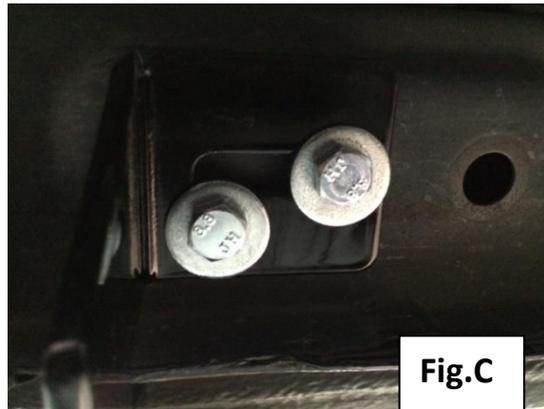

**Step 4:** Move to the front bracket and insert hardware finger tight and then to the rear bracket.

**Step5:** Once you have the hardware snug in the rear bracket, raise nerf-step into position close to the body and torque the bolts to 15-20ft./lbs. Then move to the front bracket and level step with the rear and torque bolts. Finish by torquing down bolts in center bracket completing the install.

**Step 6:** Next, take one of the supplied support brackets and align with the driver side front step bracket and loosely mount in slotted hole using the 5/16"x1" hex bolts, nuts, and washers. **(Fig.D)**

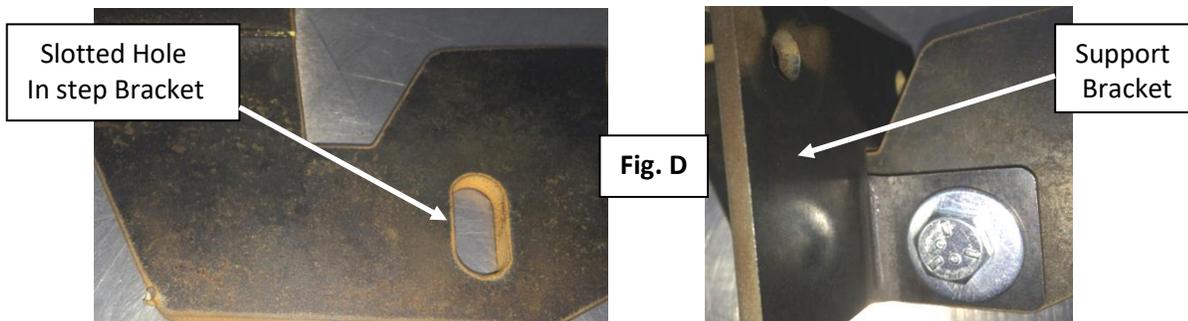




PART NUMBER: H0581CC

PRODUCT: NERF-STEP

APPLICATION: 04-15 HONDA RIDGE  
LINE

**Step 7:** Next, align the two upper 5/16" holes in the support bracket with the pinch weld in the body of the vehicle and drill out mounting holes. Secure with the supplied 5/16"x1" Hex bolts, nuts, and washers. Adjust to proper alignment and tighten all hardware. **(Fig. E)**

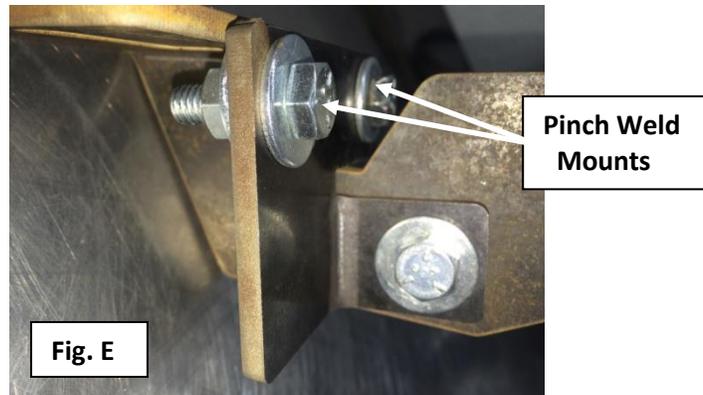

**Step 8:** Repeat steps 1-5 with the driver side. This concludes the installation.

**NOTE:** Check bolts after two weeks and re-tighten any loose hardware.