

INSTALLATION INSTRUCTIONS
Dakar Sport 52064(1-4) / Dakar 52064(1BB-4BB) / Rhino Charger BB52064(1B-4PS)
F-150 / F-250 & LOBO 97-02 (HERITAGE) 97-06 (2 & 4 X 4)

Parts List:	(1) Hardware kit including:	Extra:
QTY	(4) 1/2" x 5" hex head bolt	(2) spacer washers 1/2"
1. Bull Bar / Dakar Sport	(6) 1/2" flat washers	
2. Set of brackets	(4) 1/2" lock nuts	
	(2) 1/2" x 2" hex head bolt	
	(2) 1/2" lock washers	

Tools required:	
3/4" Wrench	Ratchet
3/4" Socket.	15 mm Socket

Instructions: **Aproximated installation time: 30 min.**

1. Read and understand instructions completely before beginning installation.
2. Locate the lateral slot (side to side) from chassis side. See image 1.
3. Place the bracket without tighten, just to see where is going to be and where is going to cut the vehicle defense. Cut on bull bar / Dakar sport tube direction. **Note: Only if the vehicle hasn't tow hooks.**
4. If the vehicle has tow hooks, take them off. **Note: The tow hooks won't be used. In 4x4 version keep the front bolt removed from the tow hooks.**
5. Place the main bracket, put a 1/2" x 5" bolt through the existents slots on chassis and bracket, hold them with a flat washer and a 1/2" lock nut. Hand - tighten. See image 2. **Note: In 4x4 versions use the bolt removed from tow hooks, See image 2.**
6. Install your Bull bar / Dakar sport over the main brackets with 1/2" x 2" and their flat and lock washers, See image 3. Hand - tighten.
7. Make any adjustment to the alignment of your Bull bar / Dakar sport and tighten all the hardware.
8. Remember to check the hardware periodically.

Assembly Diagram:

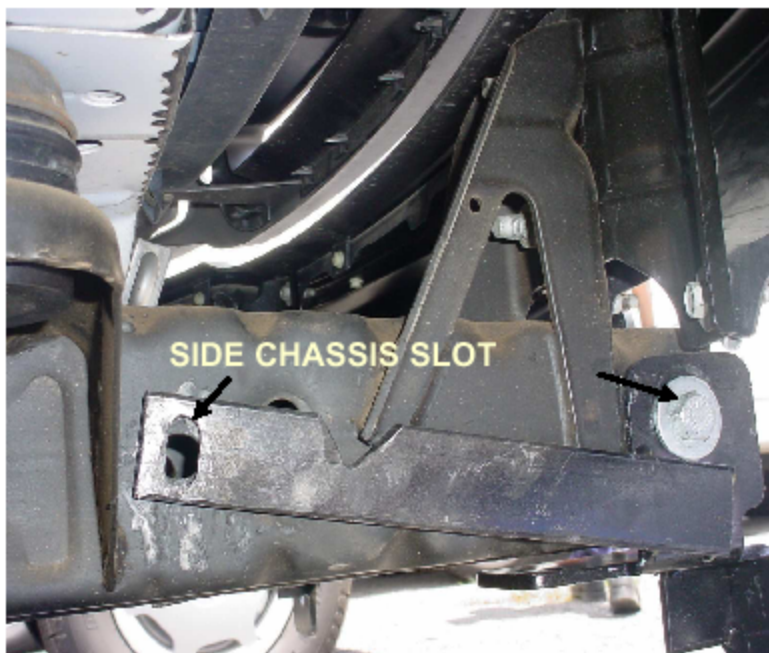


IMAGE 1 **4X2** **MODEL SHOWN**

PASSENGER SIDE

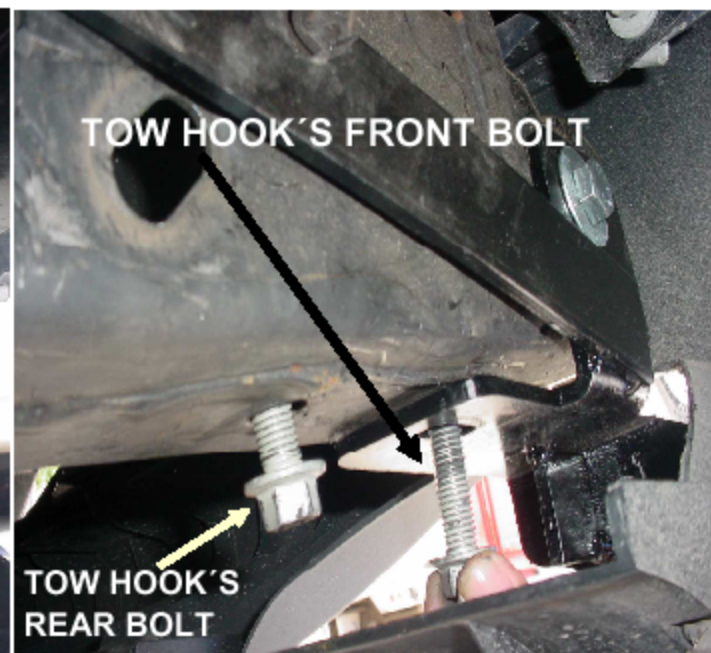


IMAGE 2 **4X4** **MODEL SHOWN**

PASSENGER SIDE IMAGES.

Cleaning and care instructions: Diseño: Calidad:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

INSTALLATION INSTRUCTIONS

Dakar Sport 52064(1-4) / Dakar 52064(1BB-4BB) / Rhino Charger BB52064(1B-4PS)
F-150 / F-250 & LOBO 97-02 (HERITAGE) 97-06 (2 & 4 X 4)



IMAGE 3



PRODUCT INSTALLED

Cleaning and care instructions:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Diseño: 

Calidad:

Revised 09-06-06

G:\Usuarios\Diseno\Instructivos PDF\Inst.52064.Pdf