



SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.

INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2013-UP FORD ESCAPE

APP PART # 28-21010, 28-21015

STYLIZED RUNNING BOARD

| ITEM | QUANTITY | DESCRIPTION | TOOLS NEEDED |
|------|----------|---|---------------|
| 1 | 2 | RUNNING BOARDS | 18MM WRENCH |
| 2,3 | 2 | FRONT MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSENGER SIDE | 18MM SOCKET |
| 4,5 | 2 | CENTER MOUNTING BRACKETS (4) DRIVERS SIDE, (5) PASSENGER SIDE | 16MM WRENCH |
| 6,7 | 2 | REAR MOUNTING BRACKETS (6) DRIVERS SIDE, (7) PASSENGER SIDE | 16MM SOCKET |
| 8 | 2 | M12 X 35MM BOLT PLATE | 13MM WRENCH |
| 9 | 5 | M10 X 30MM BUTTON HEAD BOLT PLATES | 10MM SOCKET |
| 10 | 2 | M10 X 30MM LARGE T BOLTS | UTILITY KNIFE |
| 11 | 1 | M10 X 35MM SMALL T BOLTS | RATCHET |
| 12 | 2 | M12 X 32MM OD FLAT WASHERS | TORQUE WRENCH |
| 13 | 2 | M12 LOCK WASHERS | |
| 14 | 2 | M12 HEX NUTS | |
| 15 | 8 | M10 X 27MM OD FLAT WASHERS | |
| 16 | 8 | M10 LOCK WASHERS | |
| 17 | 8 | M10 HEX NUTS | |
| 18 | 12 | M8 SQUARE HEAD BOLTS | |
| 19 | 12 | M8 X 24MM FLAT WASHER | |
| 20 | 12 | M8 NYLOCK NUTS | |
| 21 | 2 | M12 PLASTIC RETAINERS | |
| 22 | 8 | M10 PLASTIC RETAINERS | |
| 23 | 2 | M6 SELF DRILLING SCREW | |
| 24 | 2 | M6 X 18MM FLAT WASHER | |

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. Start installation under the driver side of the vehicle. NOTE: To help determine the correct mounting holes to use, hold the front Bracket up in position against the floor panel and line up the Bracket with the correct holes, (Fig. 1).
3. Driver side front Bracket installation: Select (1) M10 Small T-Bolt and (1) M10 Plastic Retainer, (Fig. 2A). Partially thread the Retainer onto the T-Bolt. Insert the T-Bolt into the inner factory oval hole, (Fig. 1 & 3). Rotate the T-Bolt 90-degrees so that the plate is across the slot. Thread the Retainer down until it is tight against the floor panel. The Retainer is designed to help hold the T-Bolt in place during Bracket installation.
4. insert (1) M10 large T-Bolt with (1) Plastic Retainer into the outer oval hole in the floor panel next to the pinch weld as previously described, (Fig. 2B & 3).
5. Hang the driver side Front Bracket from the T-Bolts with (2) M10 Flat Washers, (2) M10 Lock Washers and (2) M10 Hex Nuts, (Fig. 6). Do not tighten hardware at this time.
6. Release the plastic clips attaching the lower plastic rocker panel cover to the body, (Fig. 7).



Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846

www.westinautomotive.com

DATE: 09/29/14

7. Measure 40" back from the bottom corner of the wheel opening to locate the correct factory hole under the plastic rocker cover for the center Bracket, (Fig. 8). Pull plastic cover outward to access the hole, (Fig. 10). Partially thread (1) M10 Plastic Retainer onto (1) M10 Button Head Bolt Plate, (Fig. 9). Insert Bolt Plate into the round hole and thread the Retainer down against the body, (Fig. 10).
8. Select the driver side center Bracket (Item 4) (Fig. 11). And install the Bracket as show (Figures 12 & 13). Bolt the front flange bracket to the Bolt Plate with (1) 10mm Flat Washer, (1) 10mm Lock Washer and (1) 10mm Hex Nut. Secure the rear flange center bracket using (1) M6 washer and drilling in a (1) M6 self drilling screw. Do not tighten hardware at this time.
9. Move to the rear location and remove the plastic cover on the floor panel, (Fig. 14). Locate the small round hole under the plastic rocker cover, (Fig. 16). Select (1) M10 Button Head Bolt Plate and (1) M10 Plastic Retainer (Fig. 15). Insert the Bolt Plate into the round hole as described in Step 5, (Fig. 16 & 17).
10. Next, locate the large round hole in the floor panel. Insert (1) M12 Bolt Plate (Figure 18) (Item 8) into the large round hole and out the smaller hole toward the front, (Fig. 19). Slide the driver side Rear Bracket under the plastic rocker cover and over the (2) Bolt Plates, (Fig. 20). Secure the Bracket to the outer M10 Bolt Plate with (1) M10 Flat Washer, (1) M10 Lock Washer and (1) M10 Hex Nut. Attach the Bracket to the Larger M12 Bolt Plate with (1) M12 Flat Washer, (1) M12 Lock Washer and (1) M12 Hex Nut.. Do not tighten hardware at this time.
11. Hold the plastic cover removed in Step 9, up in position. Trace the location of the rear Bracket onto the cover, (Fig. 21). Carefully cut the cover to clear the Bracket, (Fig. 22). IMPORTANT: Cut as little as possible from the cover. Do not cut off the mounting area for the factory hardware. Reinstall the plastic cover and all plastic clips holding the bottom of the rocker cover to the body panel.
12. Take the drivers side running board and insert (6) M8 square head bolts into the channels on the bottom of the board (3 square head bolts per channel) (Fig 23). Take the running board and place it onto the previously installed mounting brackets. Align the square head bolts with the mounting holes in the brackets and attach the board to the brackets using (6) M8 flat washers, and (6) M8 nylon lock nuts. Do not fully tighten at this time
13. Repeat steps 2-12 for the passenger side.
14. Level and adjust the running boards as needed, then fully tighten all hardware at this time. Torque all M12 fasteners to 50-55 ft lbs, M10 to 35-40 ft lbs, and M8 to 25-30 ft lbs


CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER



(Fig 1) Driver side front mounting location pictured


(Fig 2A) Small 10mm x 35mm T-Bolt for driver side inner front bracket only

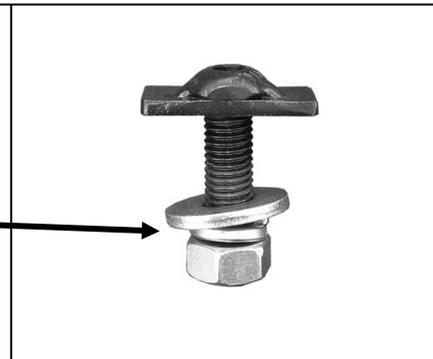


Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com


(Fig 2B) Large M10 x 30mm T-Bolt for driver and passenger side outer location on front brackets only

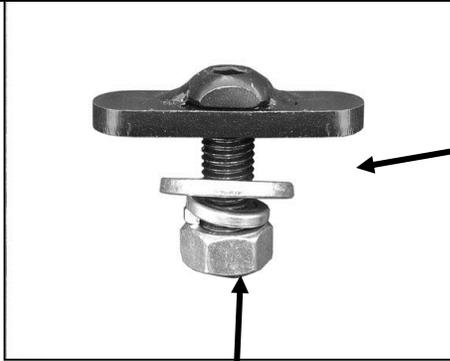


(Fig 3) Driver side pictured

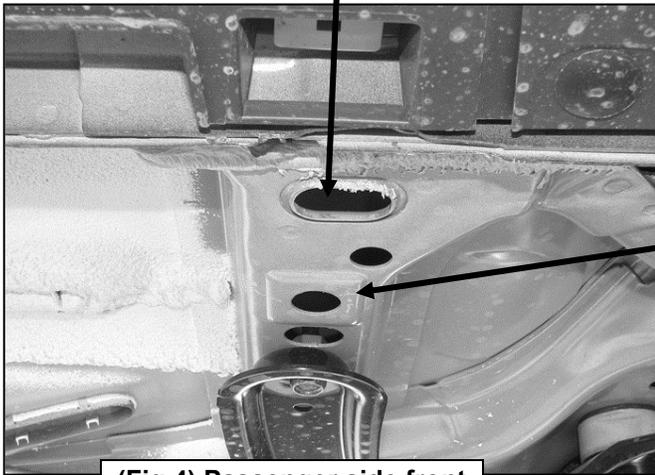

(Fig 4) Passenger side front mounting location pictured

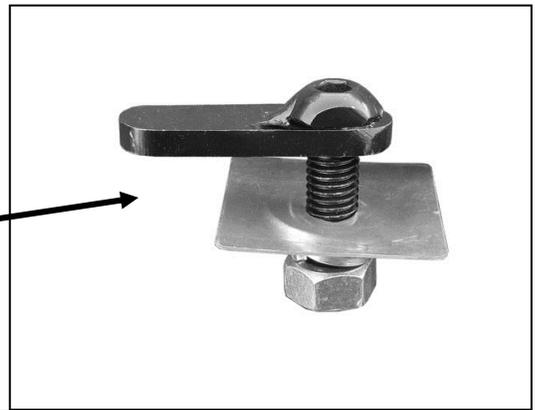


(Fig 5) Use M10 x 30mm Bolt Plate for passenger side inner location (same bolt plate used on center and rear brackets)

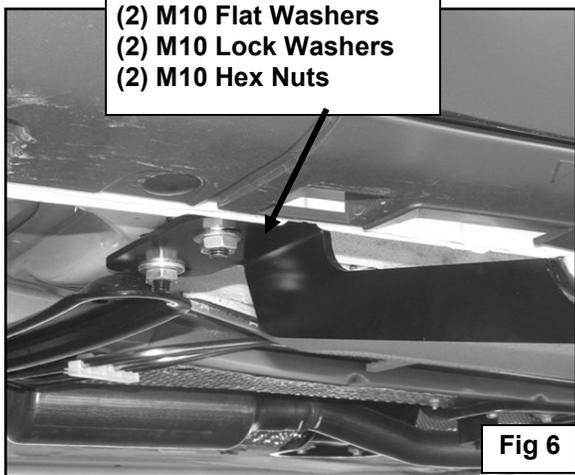

- (2) M10 Flat Washers
- (2) M10 Lock Washers
- (2) M10 Hex Nuts

Fig 6

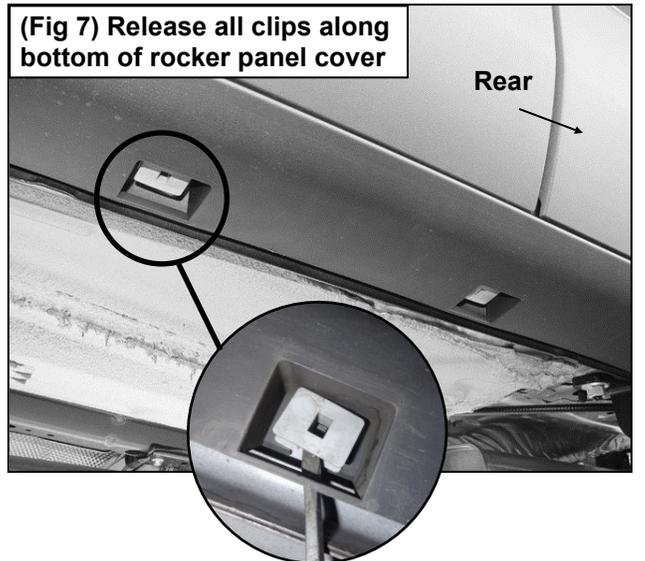


(Fig 7) Release all clips along bottom of rocker panel cover

Rear



Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773


Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com

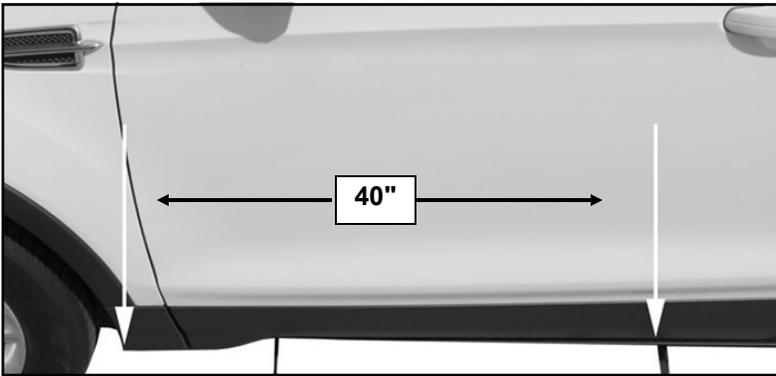

(Fig 8) Measure approximately 40 inches from bottom corner of wheel opening along rocker panel to locate factory hole for center Bracket



(Fig 9) M10 x 30mm Bolt Plate

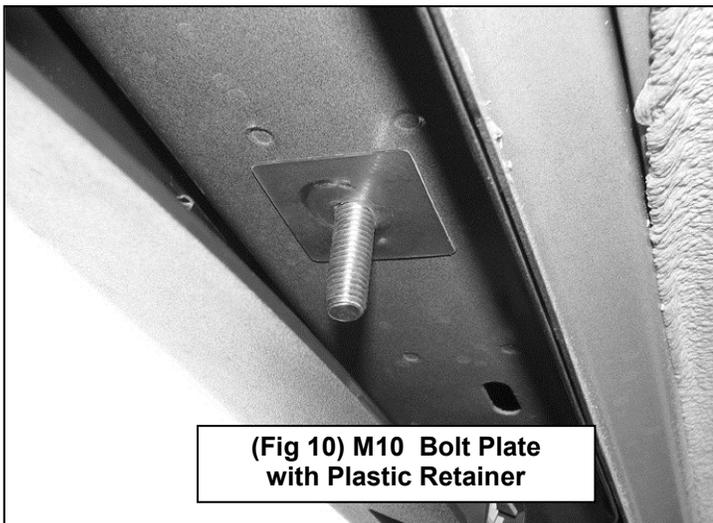

(Fig 10) M10 Bolt Plate with Plastic Retainer

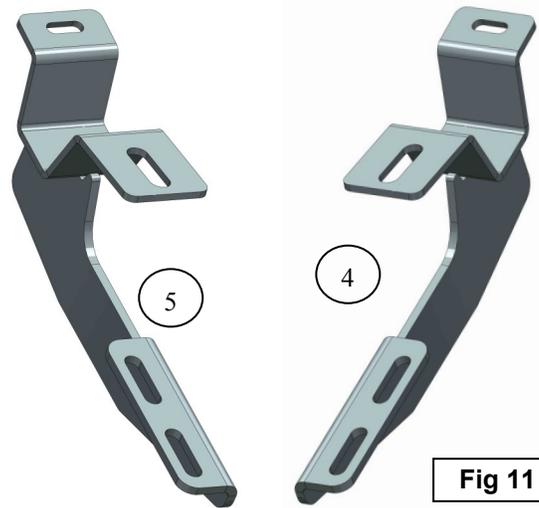


Fig 11



Fig 12




Install M6 self drilling screw here (Item 23)

Fig 13



Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773


Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com

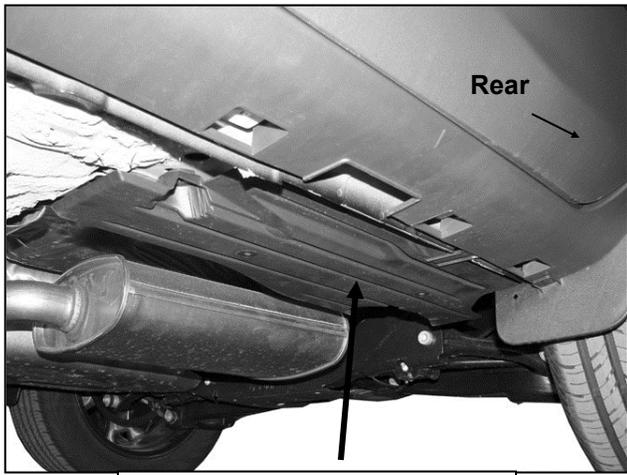

(Fig 14) Remove plastic cover



(Fig 15) M10 x 30mm Bolt Plate

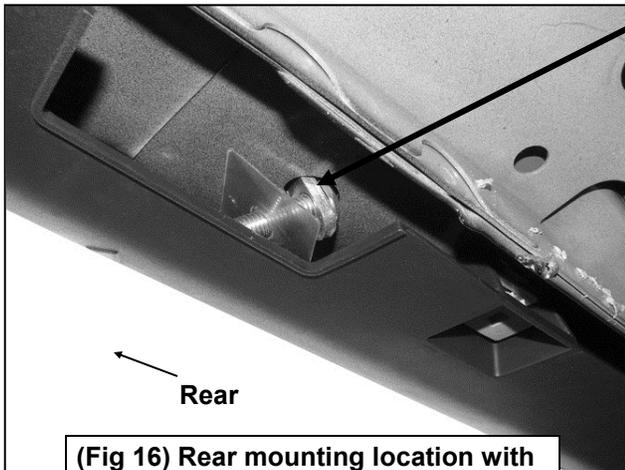

(Fig 16) Rear mounting location with Bolt Plate pictured from below



(Fig 17) Rear mounting location with Bolt Plate pictured from below



(Fig 18) M12 Bolt Plate for rear Bracket only



(Fig 19) Insert M12 Bolt Plate into large hole and out smaller hole




Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773


Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com

M12 Flat Washer
M12 Lock Washer
M12 Hex Nut


M10 Flat Washer
M10 Lock Washer
M10 Hex Nut

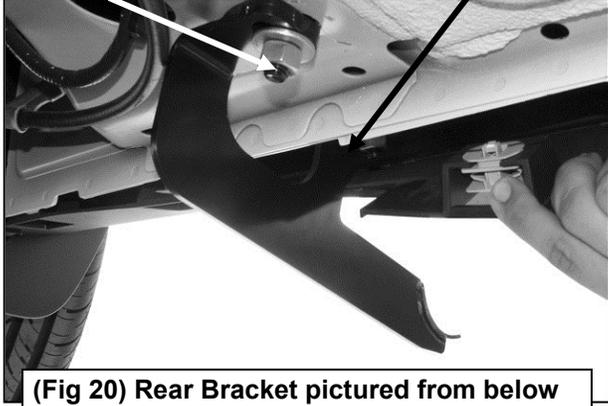


(Fig 20) Rear Bracket pictured from below

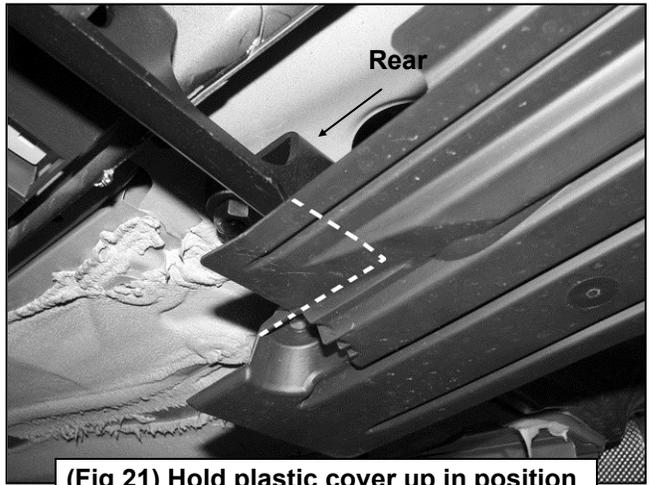

(Fig 21) Hold plastic cover up in position to determine area to cut from cover

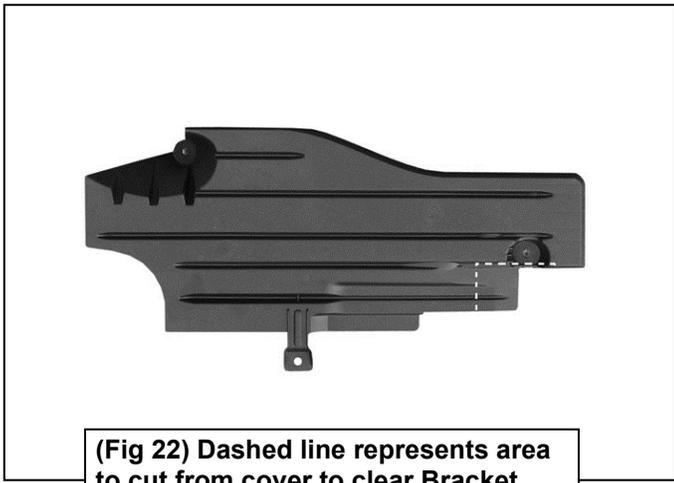

(Fig 22) Dashed line represents area to cut from cover to clear Bracket

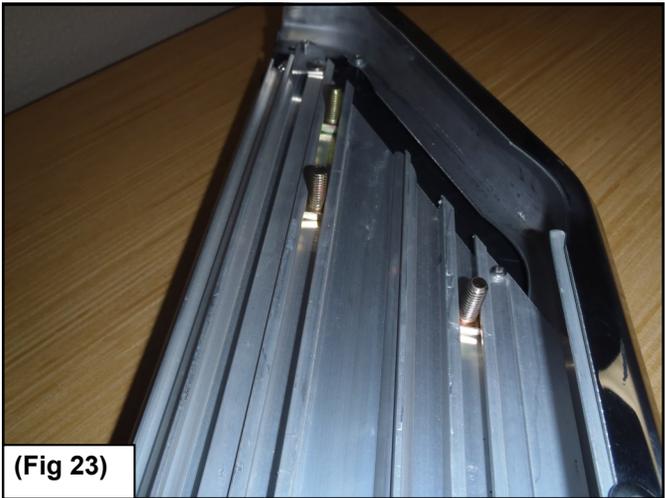

(Fig 23)



Installation complete



Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com