# INSTALLATION INSTRUCTIONS




## **HDX FRONT BUMPER LIGHT HOOP**


APPLICATION: Universal PART NUMBER:

58-95-0035

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	LIGHT HOOP ASSEMBLY	1/2" DRIVE RATCHET
2	2	SLIDING LIGHT BRACKET	3/4" SOCKET
3	2	1/2" HEX FLANGE NUT (YELLOW ZINC)	1/4" DRIVE RATCHET
4	2	1/2" HEX HEAD FLANGE BOLT (YELLOW ZINC)	7/16" SOCKET
5	4	1/4" HEX FLANGE NUT (YELLOW ZINC)	3/4" WRENCH
6	4	1/4" HEX HEAD FLANGE BOLT (YELOOW)	7/16" SHORT WRENCH

#### ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

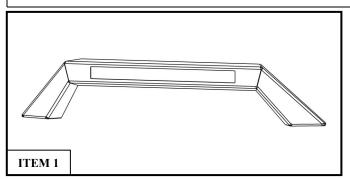

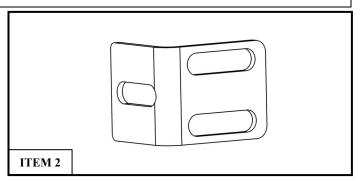



### **PROCEDURE**

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.


Failure to identify damage before installation could lead to a rejection of any claim.

2. Install Sliding Light Brackets (Item 2) to Light Hoop Assembly (Item 1) with supplied hardware; (4) 1/4" Hex Flange Nuts and (4) 1/4" Hex Flange Bolts. See Figure 1, (Note: Install light with light manufacturer hardware.)

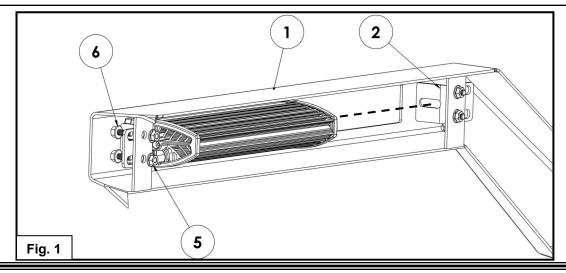




- 2. Install Light Hoop Assembly (Item 1) to Front Bumper with supplied hardware; (2) 1/2" Hex Flange Nuts and (2) 1/2" Hex Flange Bolts. See **Figure 2**
- 3. Torque hardware: 1/4" to 8 ft-lbs, 1/2" to 37 ft-lbs.

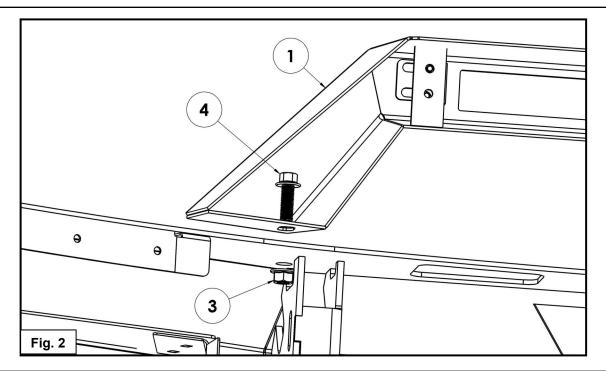



#### CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER





# **WARNINGS & NOTICES**

# **NOTICE**

Westin Receiver Hitches are designed to accommodate a 2"- square receiver draw bar rated for class III/IV towing. Closely follow all Westin Installation Instructions for the proper installation of product. Improper installation can result in death, serious injury, and/or product and vehicle damage. In the operation of these products, it is imperative to observe precautions for your personal safety and the safety of others.



# **WARNING**



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

### **FASTENERS**:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.

#### **DRILLING:**


Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.

### **EYE PROTECTION:**

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

### **MAXIMUM TOWING/CARRYING CAPACITY:**

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.



3