



INSTALLATION INSTRUCTIONS

Stylized Running Board

AUTOMOTIVE PRODUCTS,

APPLICATION:
2007-2014, Ford Edge

PART NUMBER:
28-21050, 28-21055


CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	2	RUNNING BOARDS	13MM SOCKET
2	1	FRONT MOUNTING BRACKET DRIVERS SIDE	17MM SOCKET
3	1	FRONT MOUNTING BRACKET PASSENGER SIDE	RATCHET
4	1	REAR MOUNTING BRACKET DRIVERS SIDE	TORQUE WRENCH
5	1	REAR MOUNTING BRACKET PASSENGER SIDE	14MM SOCKET
6	4	M10 FLAT WASHERS (YELLOW ZINC)	
7	4	M10 LOCK WASHERS (YELLOW ZINC)	
8	4	M10 HEX NUTS (YELLOW ZINC)	
9	8	M8 SQUARE HEAD BOLTS (YELLOW ZINC)	
10	8	M8 FLAT WASHERS (YELLOW ZINC)	
11	8	M8 LOCK WASHERS (YELLOW ZINC)	
12	8	M8 HEX NUTS (YELLOW ZINC)	
13	4	M10 BOLT PLATE (YELLOW ZINC)	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING


ITEM 1




ITEM 2

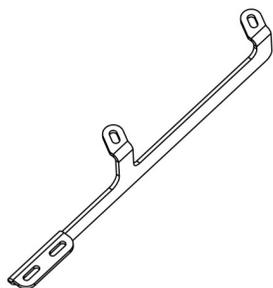


ITEM 3

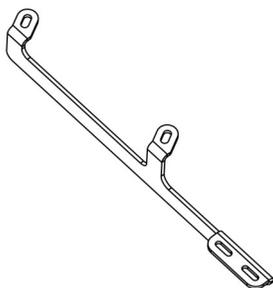

ITEM 4

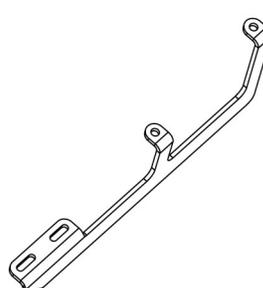

ITEM 5

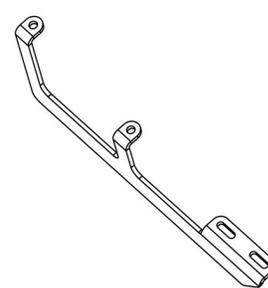

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846



PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.



Carefully read and understand all instructions before attempting installation.

Failure to identify damage before installation could lead to a rejection of any claim.

2. Look for slots on the rocker panel and the bottom frame of the vehicle, then insert supplied M10 bolt plates. **Note:** For newer model years the drivers side will have a plastic cover similar to the one shown in **Figure 2** but larger. There is a large hole in the plastic cover that leads to the mounting slot where the bolt plate will be placed. See **Figures 1 & 2**.
3. Loosely install driver side front mounting bracket with supplied M10 hardware, then repeat for passenger side. **Note:** Bracket will be angled towards the center of the vehicle. See **Figures 1 & 2**.

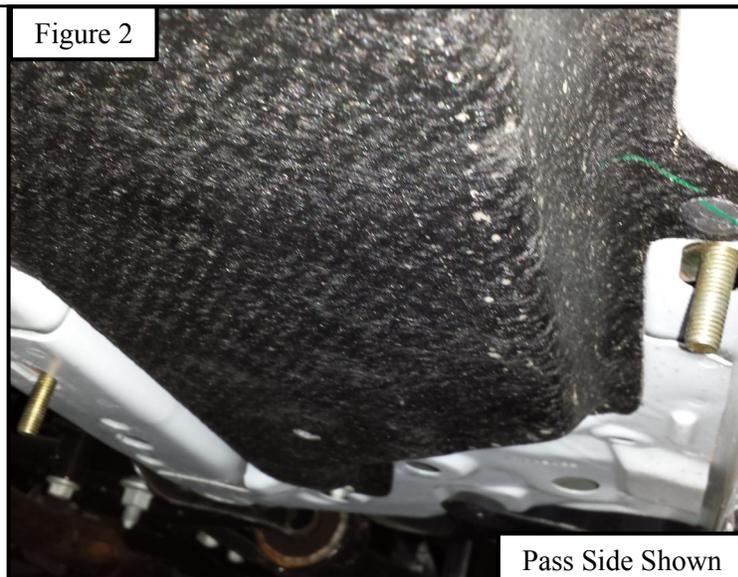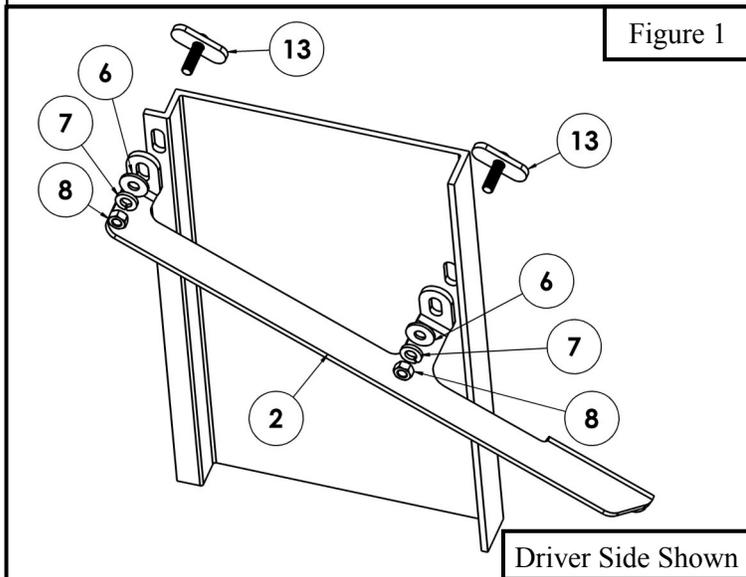



4. Look underneath the rear of the vehicle, where you will find M10 bolts for the suspension. See **Figure 3 & 4**.
5. Remove the two factory M10 bolts closest to the center of the vehicle. Then loosely install the driver side rear mounting bracket with the previously removed factory M10 bolts, repeat for passenger side. **Note:** Bracket will be angled towards the center of the vehicle.

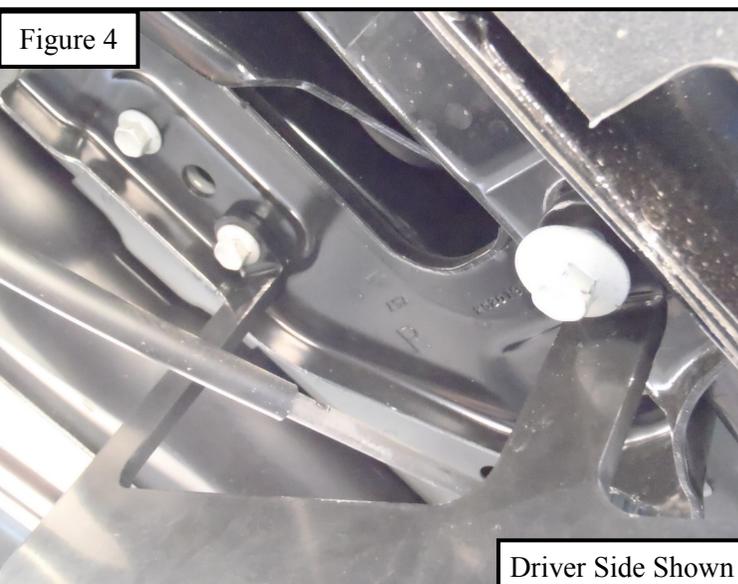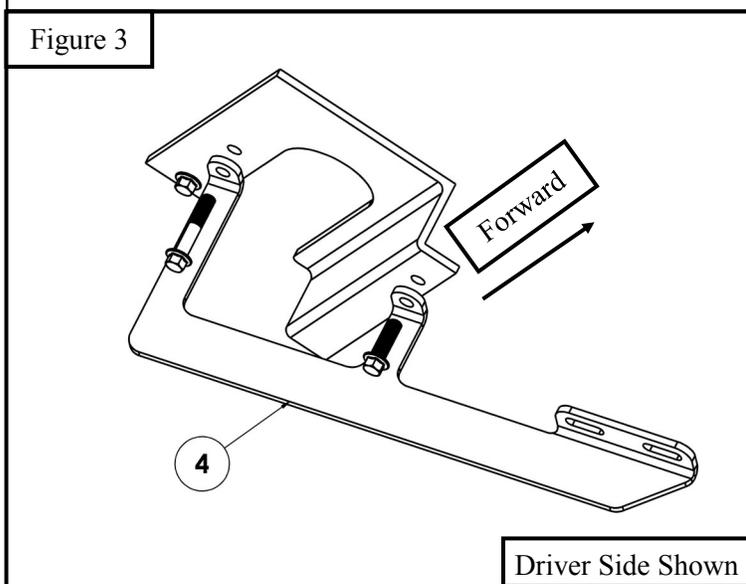

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

6. Slide square head bolts into the rails of the running board. Lay the running board on top of the brackets, then loosely install running board to mounting brackets with supplied M8 hardware. **See Figure 5 & 6.**

7. Align and adjust as desired, then torque all M8 hardware to 15 ft-lbs, and all M10 hardware to 35 ft-lbs.

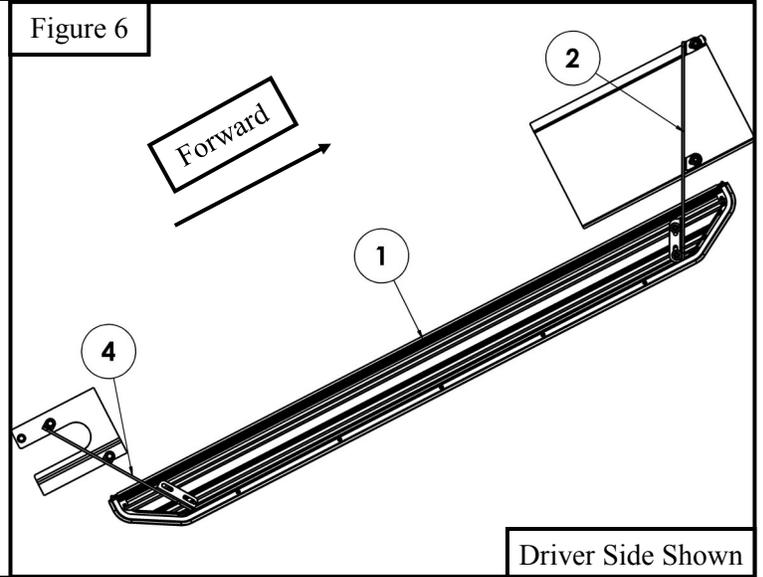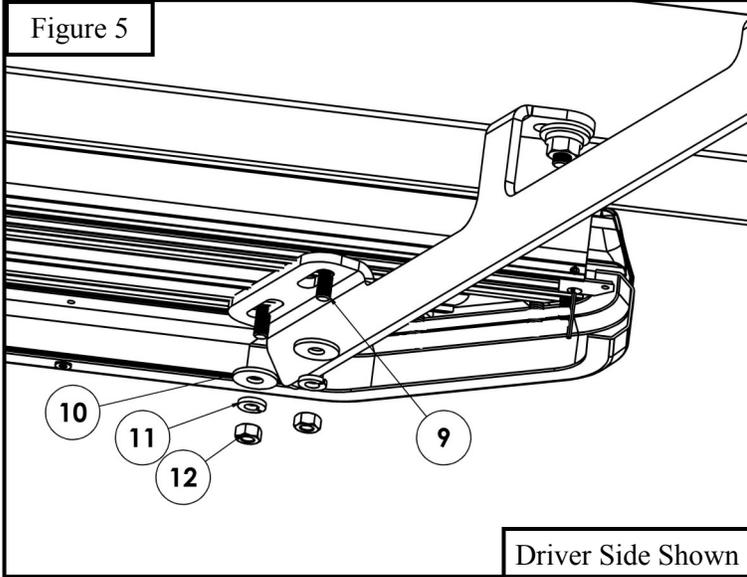

INSTALLATION COMPLETED



Care Instructions

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES..
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com