



SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.


INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

CLASS III RECEIVER HITCH
APPLICATIONS: 2011-2013 DODGE DURANGO/
JEEP GRAND CHEROKEE
APP PART # 65-1055

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	CLASS 3 HITCH ASSEMBLY	TORQUE WRENCH & 21MM SOCKET

WARNING: Never exceed the capacity ratings shown on the receiver hitch or the tow vehicle. See your vehicle's owners guide for towing guidelines.

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. Remove two (per side) existing OEM M14 hex cap screws from the inside uni-body channels (fig 1 & fig 2). Repeat for both sides.
3. Position the hitch assembly (item 1) on vehicle and reinstall the OEM M14 hex cap screws (fig 3 & fig 4). The hitch assembly bracket will compress the caulking, trim excess caulk if it interferes with installation.
4. Level and align hitch assembly and tighten all hardware at this time. Torque the M14 hardware to 125-135 ft-lbs. (fig 5).

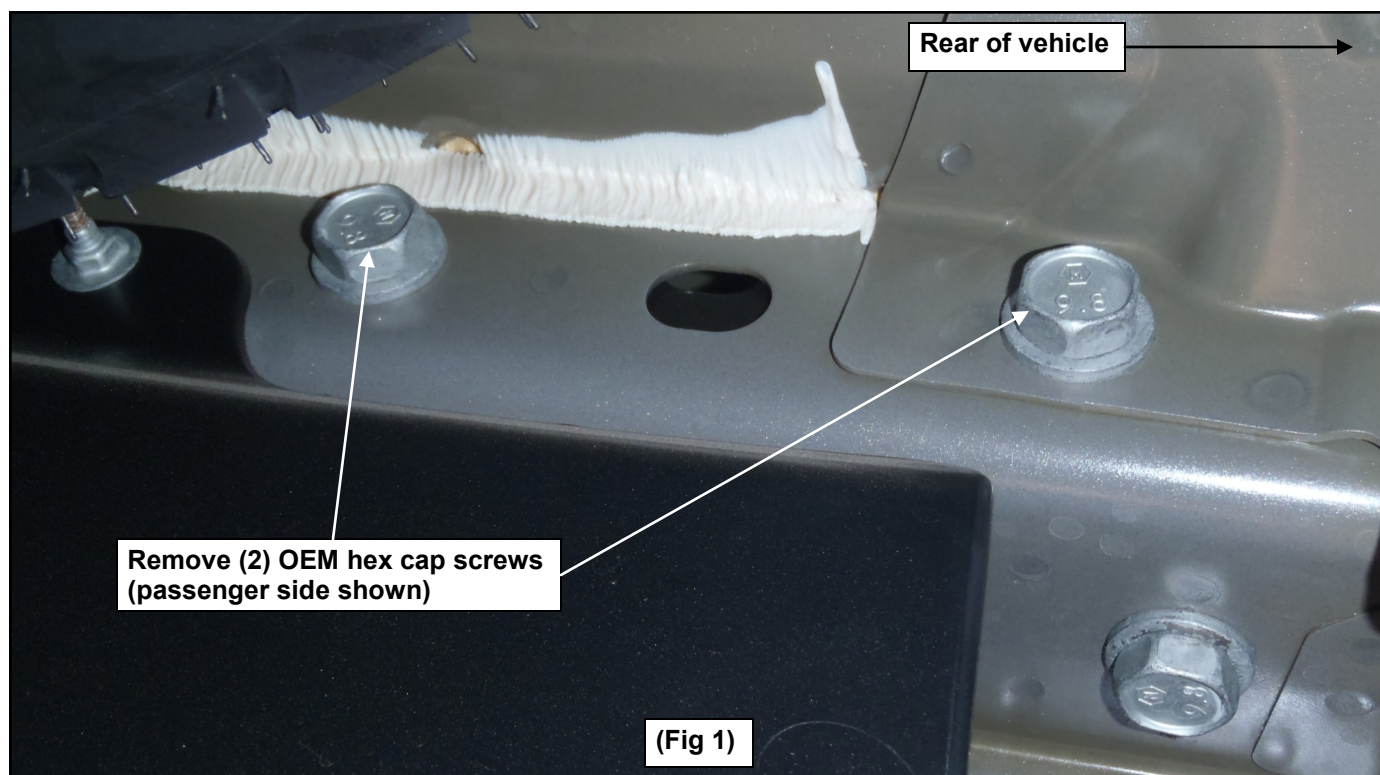

NOTICE: This product complies with all safety specifications and requirements defined for V.E.S.C. regulation V-5 & SAE J684

CARE INSTRUCTIONS

- BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER





Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773


Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com

Note:
tional
cal
mount-
holes
on
side

Op-
electri-
bracket
ing
located
drivers
tab.

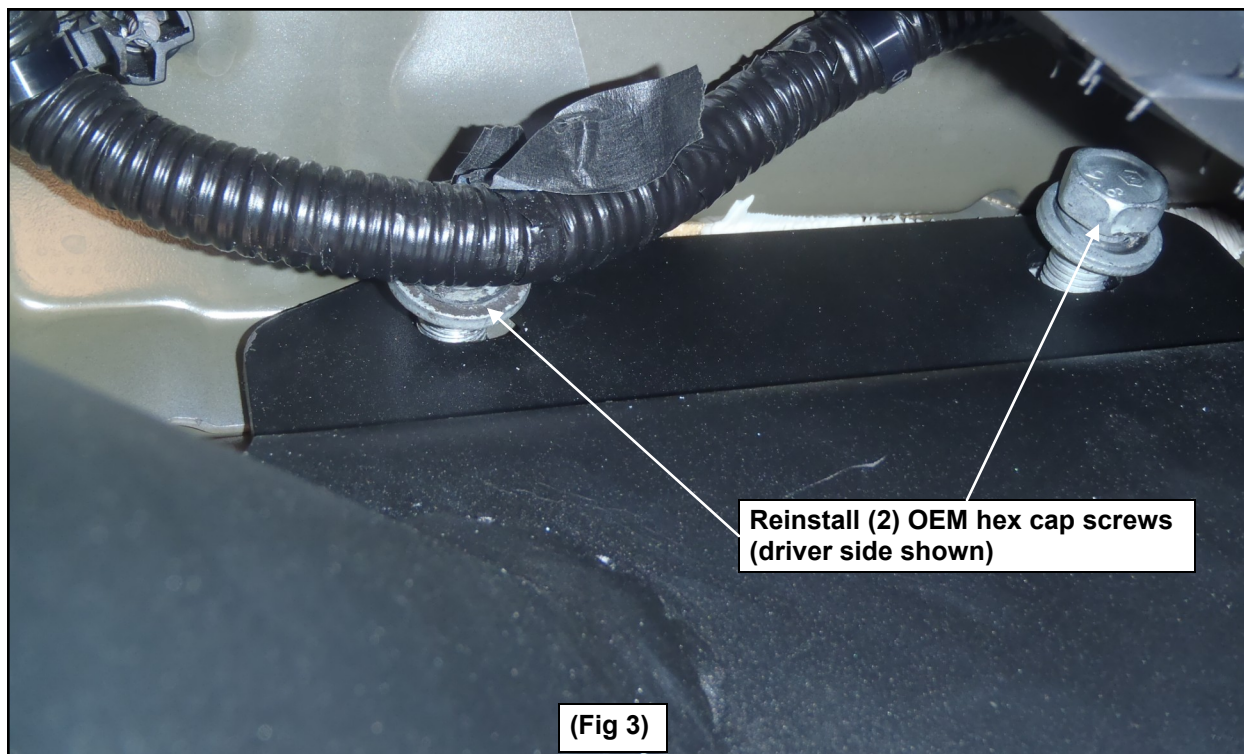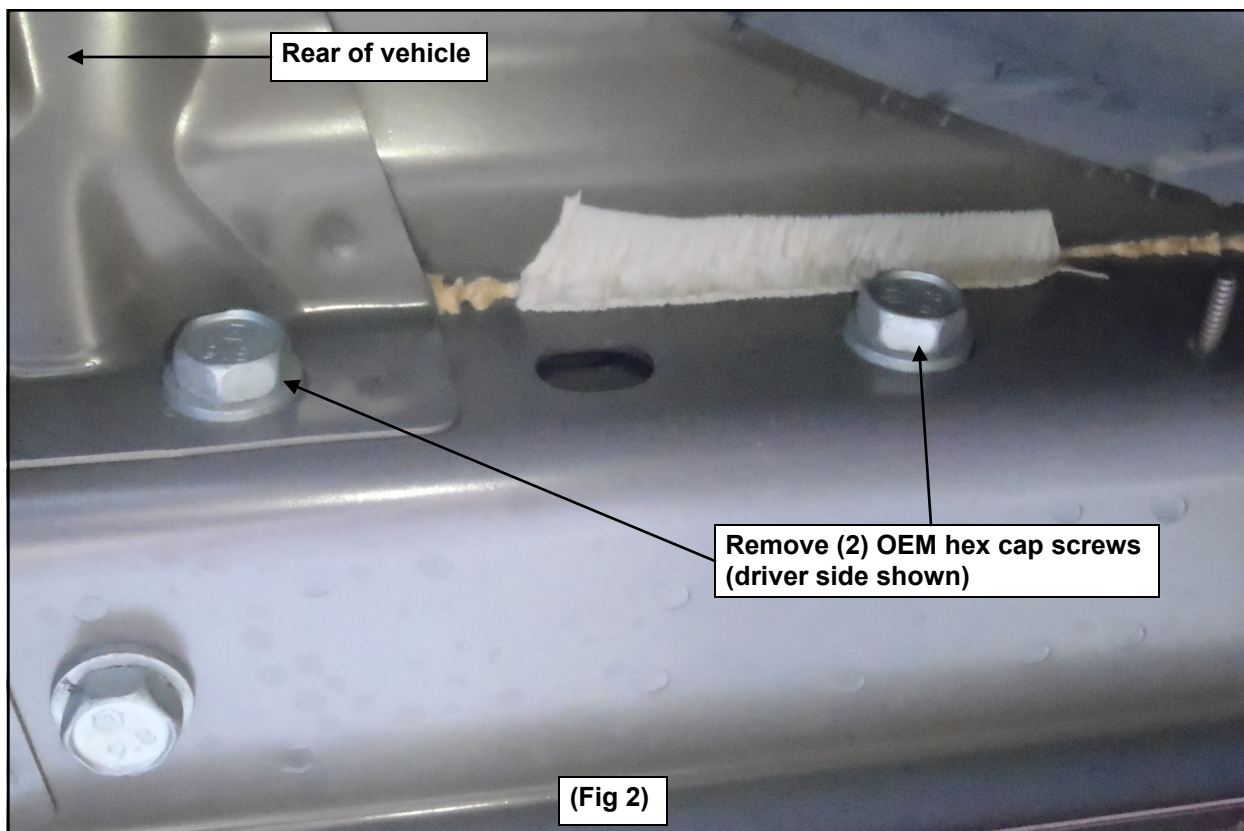

Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

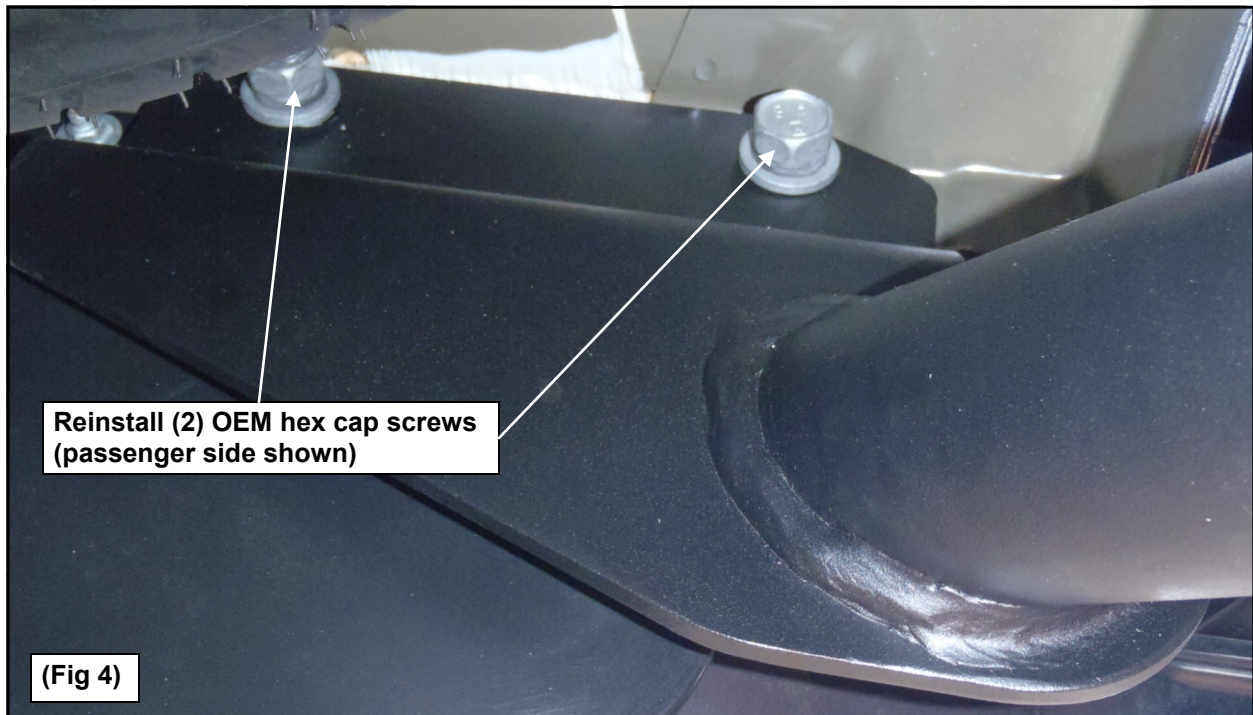

Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com



AUTOMOTIVE PRODUCTS, INC.
San Dimas, California

WARNINGS & NOTICES FOR THE INSTALLATION OF WESTIN TOWING PRODUCTS - CLASS III RECEIVER HITCH

NOTICE

Westin Receiver Hitches are designed to accommodate a 2" - square receiver draw bar rated for class III/IV towing. Closely follow all Westin Installation Instructions for the proper installation of product. Improper installation can result in death, serious injury, and/or product and vehicle damage. In the operation of these products, it is imperative to observe precautions for your personal safety and the safety of others.

WARNING

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY:

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**



Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773