



SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.

INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2012-2013 HONDA CRV
APP PART # 32-21000, 32-21005

| ITEM | QUANTITY | DESCRIPTION | TOOLS NEEDED |
|------|----------|---------------------------------|---------------|
| 1 | 1 | CONTOUR BAR | TORQUE WRENCH |
| 2 | 1 | MOUNTING BRACKET DRIVER SIDE | |
| 3 | 1 | MOUNTING BRACKET PASSENGER SIDE | |
| 4 | 2 | MOUNTING BRACKET CLAMP | |
| 5 | 2 | M12 HEX HEAD BOLTS | 19MM SOCKET |
| 6 | 2 | M12 FLAT WASHERS | |
| 7 | 2 | M12 LOCK WASHERS | |
| 8 | 8 | M8 HEX HEAD BOLTS | 13MM WRENCH |
| 9 | 16 | M8 FLAT WASHER | |
| 10 | 8 | M8 LOCK WASHERS | |
| 11 | 8 | M8 HEX NUT | 13MM SOCKET |

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. From underneath the front of the vehicle remove the plastic lower air dam, clips, and bolts.
3. Install the driver side mounting bracket (item 2) to the sub-frame tube by lining up the locating pin with the corresponding hole in the sub-frame tube. Using M8 hex bolts (item 8), washers (item 9), lock washers (item 10), and hex nuts (item 11), attach the mounting bracket clamp to the mounting bracket. (fig 1) Torque to 16 ft-lbs.
4. Install the passenger side mounting bracket the same as the driver side. (fig 2)
5. Install the contour bar (item 1) to the mounting brackets with the M12 hex head bolts (item 5), flat washers (item 6), and lock washers (item 7). (fig 3)
6. Level and adjust contour bar and tighten all hardware at this time. (fig 4)
7. Torque M12 hardware to 55ft-lbs.
8. Re-attach lower air dam and trim as necessary to fit around mount brackets.


CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER




Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com

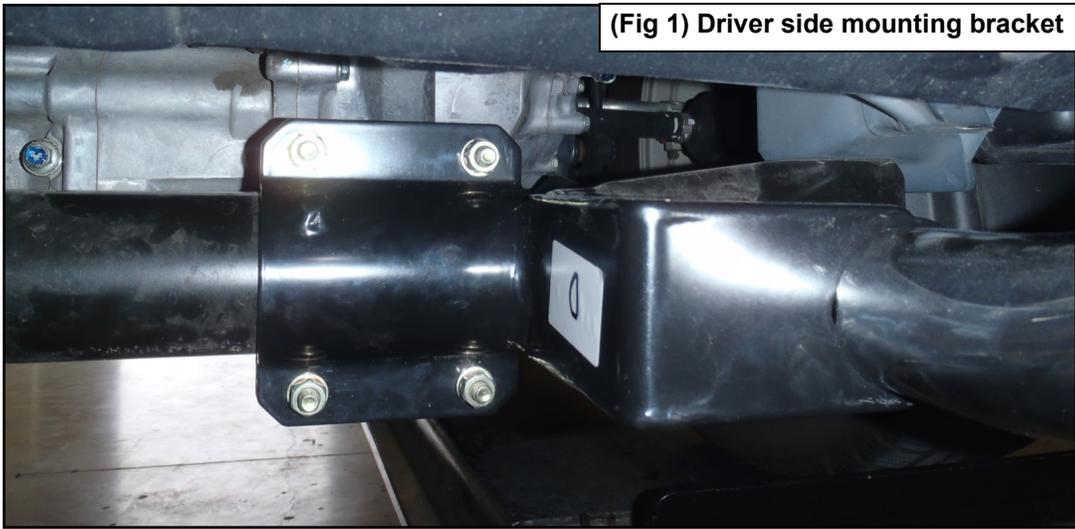

(Fig 1) Driver side mounting bracket

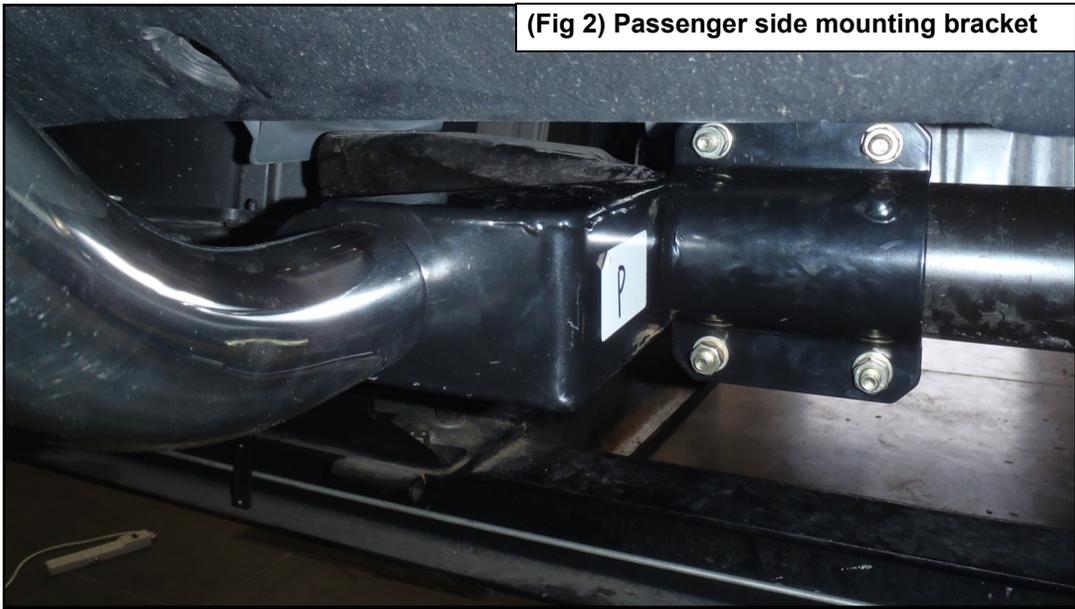

(Fig 2) Passenger side mounting bracket




(Fig 3) Contour bar mounted to bracket on driver side.



Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com

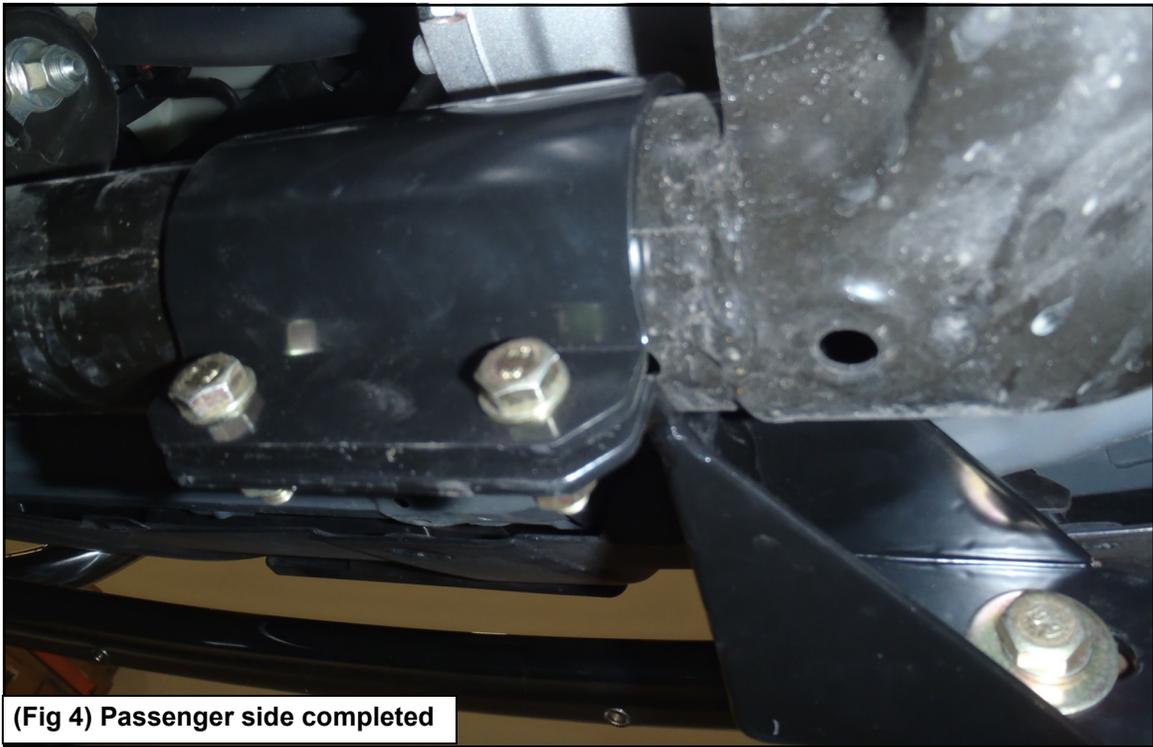

(Fig 4) Passenger side completed



Contour bar installed with optional lights




Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com

OPTIONAL LIGHT MOUNT TABS

| ITEM | QUANTITY | DESCRIPTION | TOOLS NEEDED |
|------|----------|---------------------------|----------------------------|
| 12 | 2 | LIGHT MOUNT BRACKET TABS | HEX KEY TOOL (INCLUDED) |
| 13 | 2 | M10 BUTTON HEAD CAP SCREW | |
| 14 | 2 | M10 TOOTHED LOCK WASHER | |
| 15 | 2 | M10 FLAT WASHER | |
| 16 | 1 | ADHESIVE FOAM TAPE | |

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. Apply foam tape (item 16) to front and back of the tab facing where it mounts to the tube. (fig 5)
3. Using the supplied hex key tool, button head cap screws (item 13), lock washers (item 14), and flat washers (item 15), attach the bracket tabs (item 12) to the threaded inserts in the bottom of the cross tube. (fig 6)

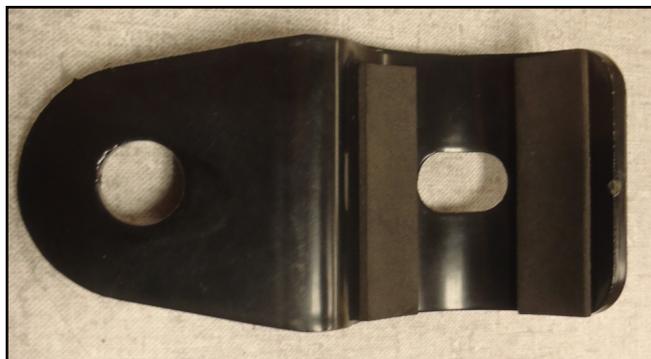

(Fig 5) Foam tape applied to light tab



(Fig 6) Light tab installed on bar



Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com